



HIGH GLOSS SHOE CABINET (1500MM) **ASSEMBLY INSTRUCTIONS**

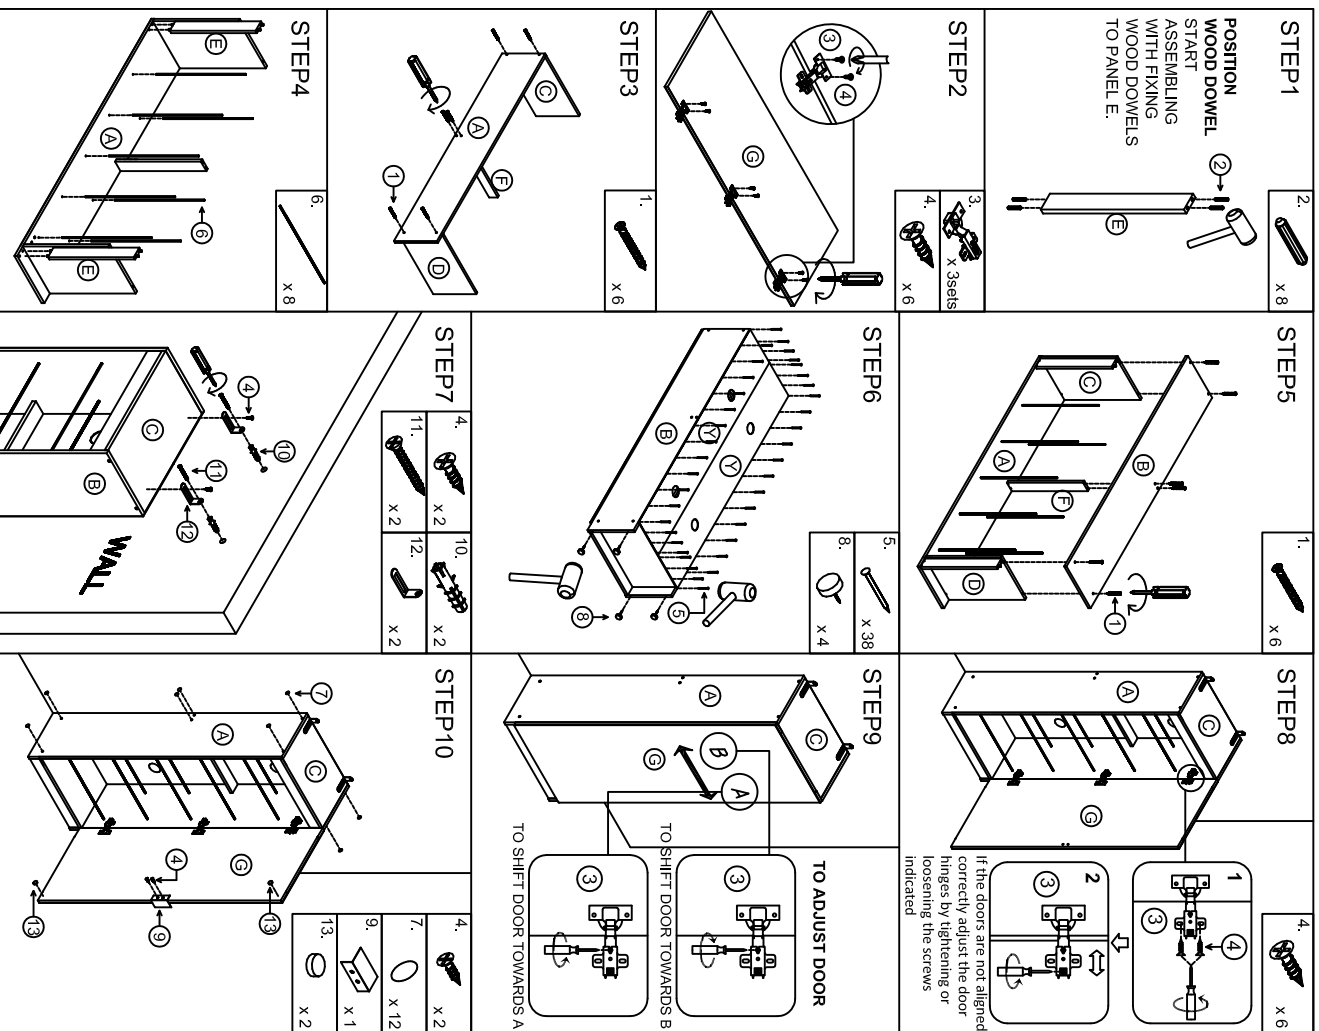

HIGH GLOSS SHOE CABINET (1500MM) **ASSEMBLY INSTRUCTIONS**

Thank you for purchasing the mirror shoe cabinet. Please read the instructions carefully to ensure safe operation of the product.

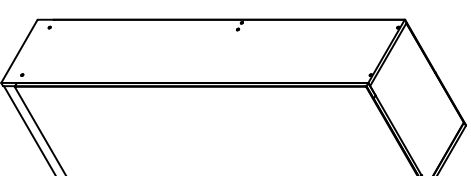

Size: W500 x D300 x H1500 mm

Colour: Black / White / Oak

PLEASE READ this sheet prior to assembly to familiarise yourself with the various stages of construction.

Carefully open the pack supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

CAUTION: There are small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit to avoid the danger of choking hazards.

Tools Required



HIGH GLOSS SHOE CABINET (1500MM)

ASSEMBLY INSTRUCTIONS

IMPORTANT - READ CAREFULLY - RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

INFORMATION

- This product is intended for a maximum weight of 312kg. Do not exceed this weight.
- Due to the size of this product we recommend that it is assembled in the room intended for use.
- When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled as illustrated before use.
- Check all screws or bolts are tightened and inspect regularly.
- Tools not included.

WARNINGS

- This product should only be used on firm, level ground.
- Keep small parts out of reach of children.
- Make sure the legs remain in contact with the ground.
- Do not use power tools to construct this product.
- Do not tighten screws until fully assembled.
- Do not over tighten screws or bolts.
- Do not use this product if parts are missing, damaged or worn.
- Do not lean on the product.
- If a glass component is chipped or broken, stop using the product and consult the manufacturer or supplier.
- Do not strike the glass with hard or pointed items.
- It is essential that this unit is fixed to a wall with the fixings provided.

CARE INSTRUCTIONS

- Never use scourers, abrasives or chemical cleaners.
- To clean wipe with a sponge and warm soapy water Do not use solvent based cleaners or detergents as they can bleach or damage the product.
- When cleaning glass panels or mirrors use a damp cloth with washing up liquid or soft soap if necessary; do not use washing powders or any other substances containing abrasives since these substances scratch glass.

HIGH GLOSS SHOE CABINET (1500MM)









ASSEMBLY INSTRUCTIONS

Parts and Fittings Checklist














Please check the pack contents before assembling this product. If any components are missing, please contact your retailer.

The fittings pack contains small items that should be kept away from small children.

Parts

A	B	C	E
			 x2
		D	F
			
G	Y		
			

Fittings

1	CSK SCREW (4.7 x 38mm)		12
2	WOOD DOWEL (6 x 30mm)		8
3	METAL HINGE (5/8")		3 SETS
4	CSK SCREW (3.5 x 16mm)		16
5	NAIL PIN		38
6	METAL ROD (M5 x 490mm)		8
7	STICKER (Ø19MM)		12
8	NAIL LEG		4
9	ALUMINIUM HANDLE (100 x 64 Hole)		1
10	WALL PLUG		2
11	CSK SCREW (4 x 38mm)		2
12	L - BRACKET		2
13	DOOR BUFFER (10MM)		2

HIGH GLOSS SHOE CABINET (1800MM)

ASSEMBLY INSTRUCTIONS

STEP5

x 8

STEP8

x 3 sets

x 6

STEP6

x 4/6

x 4

STEP7

x 2

x 2

STEP9

x 1

x 2

STEP10


x 1

x 16

HIGH GLOSS SHOE CABINET (1800MM)

ASSEMBLY INSTRUCTIONS

Thank you for purchasing the mirror shoe cabinet. Please read the instructions carefully to ensure safe operation of the product.

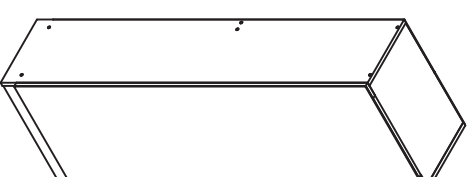

Size: W500 x D300 x H1800 mm
Colour: Black / White / Oak

PLEASE READ this sheet prior to assembly to familiarise yourself with the various stages of construction.

Carefully open the pack supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

CAUTION: There are small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit to avoid the danger of choking hazards.

Tools Required



HIGH GLOSS SHOE CABINET (1800MM)

ASSEMBLY INSTRUCTIONS

IMPORTANT - READ CAREFULLY - RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

INFORMATION

- This product is intended for a maximum weight of 312kg. Do not exceed this weight.
- Due to the size of this product we recommend that it is assembled in the room intended for use.
- When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled as illustrated before use.
- Check all screws or bolts are tightened and inspect regularly.
- Tools not included.

WARNINGS

- This product should only be used on firm, level ground.
- Keep small parts out of reach of children.
- Make sure the legs remain in contact with the ground.
- Do not use power tools to construct this product.
- Do not tighten screws until fully assembled.
- Do not over tighten screws or bolts.
- Do not use this product if parts are missing, damaged or worn.
- Do not lean on the product.
- If a glass component is chipped or broken, stop using the product and consult the manufacturer or supplier.
- Do not strike the glass with hard or pointed items.
- It is essential that this unit is fixed to a wall with the fixings provided.

CARE INSTRUCTIONS

- Never use scourers, abrasives or chemical cleaners.
- To clean wipe with a sponge and warm soapy water Do not use solvent based cleaners or detergents as they can bleach or damage the product.
- When cleaning glass panels or mirrors use a damp cloth with washing up liquid or soft soap if necessary; do not use washing powders or any other substances containing abrasives since these substances scratch glass.

HIGH GLOSS SHOE CABINET (1800MM)


ASSEMBLY INSTRUCTIONS

Parts and Fittings Checklist

Please check the pack contents before assembling this product. If any components are missing, please contact your retailer.

The fittings pack contains small items that should be kept away from small children.


Parts

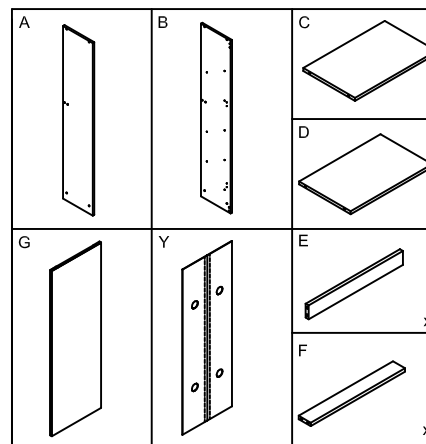

1		CSK SCREW (4.7 x 38mm)	16
2		WOOD DOWEL (6 x 30mm)	8
3		METAL HINGE (5/8")	3 SETS
4		CSK SCREW (3.5 x 16mm)	16
5		NAIL PIN	46
6		METAL ROD (M5 x 490mm)	9
7		STICKER (Ø19MM)	16
8		NAIL LEG	4
9		ALUMINIUM HANDLE (100 x 64Hole)	1
10		WALL PLUG	2
11		CSK SCREW (4 x 38mm)	2
12		L - BRACKET	2
13		DOOR BUFFER (10MM)	2


STEP1

POSITION
WOOD DOWEL
START
ASSEMBLING
WITH FIXING
WOOD DOWELS
TO PANEL E.

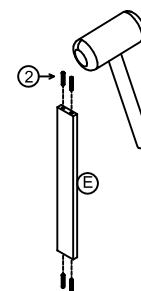


x 8

STEP3

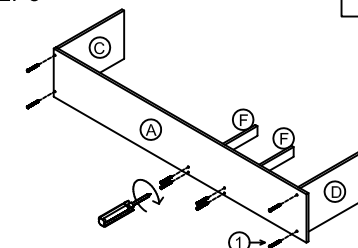


x 8

STEP2

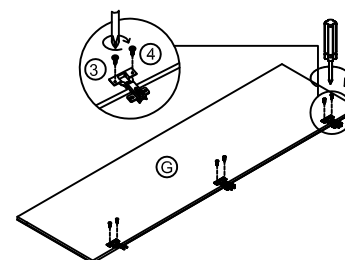

x 3sets
 x 6

STEP4

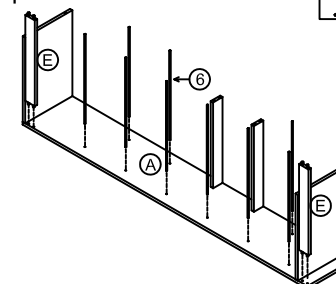

x 9