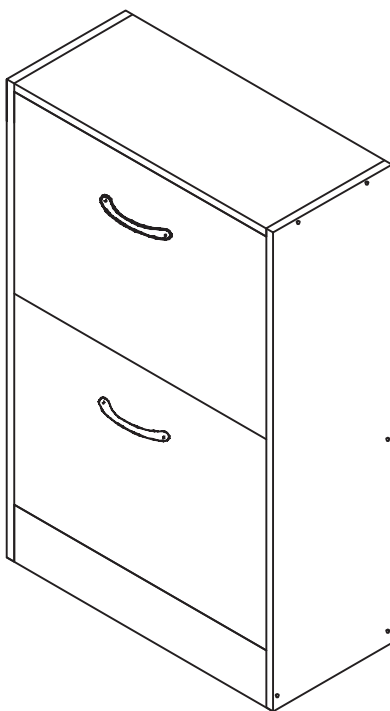


HUMPHREY TWO TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

Thank you for purchasing the **HUMPHREY TWO TIER SHOE CABINET**.
Please read the instructions carefully to ensure safe operation of the product.




SIZE:W600XD240XH805MM
COLOUR : WHITE / OAK

PLEASE READ this sheet prior to assembly to familiarise yourself with the various stages of construction.

Carefully open the pack supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

CAUTION: There are small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit to avoid the danger of choking hazards.

Tools Required



30 Min
Set Up

HUMPHREY TWO TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

IMPORTANT - READ CAREFULLY - RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

INFORMATION

- The product is intended for a maximum load of 15kg spread evenly thorough the storage compartments. Do not exceed this weight.
- Due to the size of this product we recommend that it is assembled in the room intended for use.
- When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled and secured as illustrated before use.
- Check all screws or bolts are tightened and inspect regularly.
- This product should only be used on firm, level ground.
- Keep small parts out of reach of children.
- Tools are not included.

WARNINGS

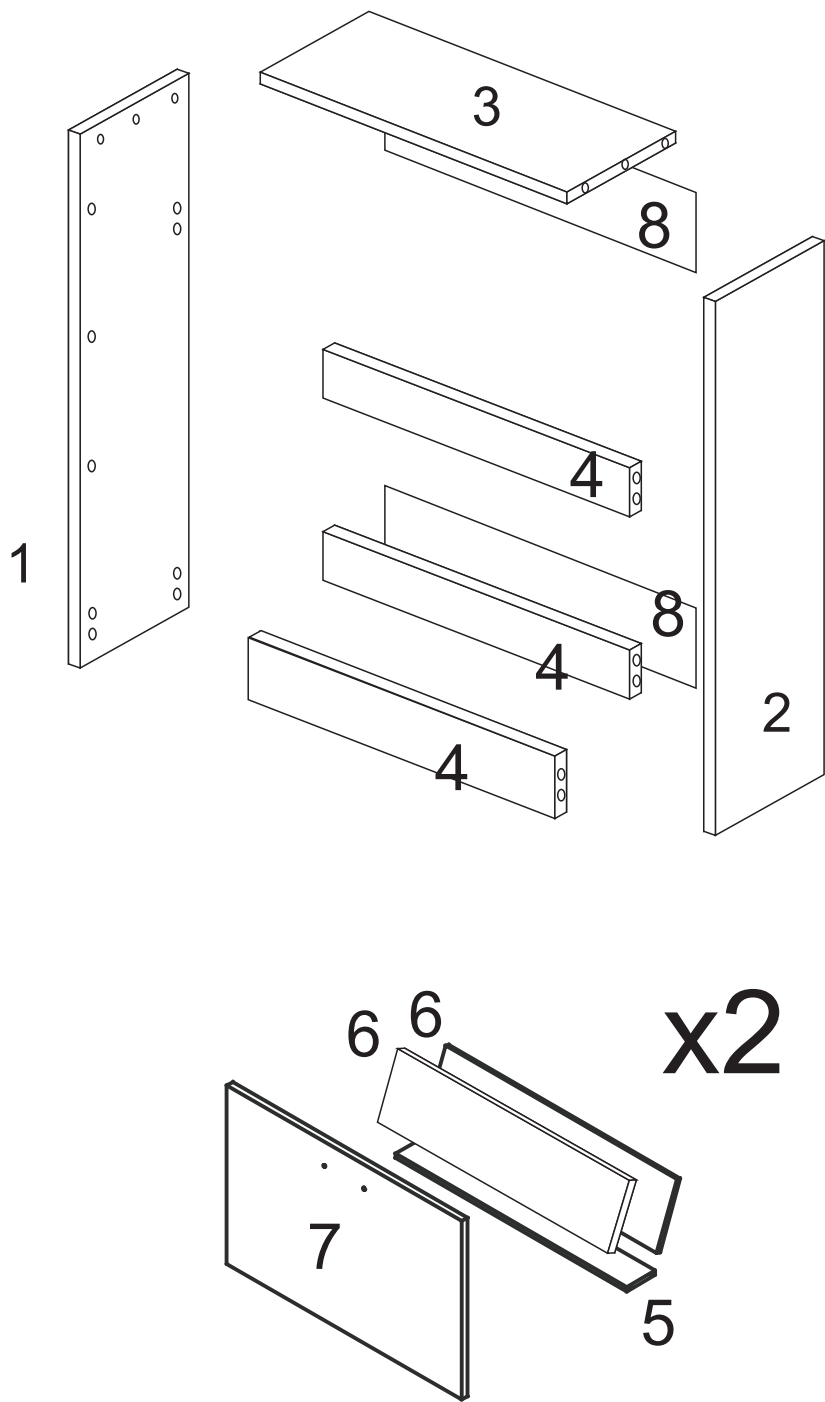
- DO make sure the legs remain in contact with the ground.
- DO keep small parts out of reach of children.
- DO NOT use power tools to construct this product.
- DO NOT tighten screws until fully assembled.
- DO NOT over tighten screws or bolts.
- DO NOT use this product if parts are missing, damaged or worn.
- DO NOT sit or stand on the product.
- It is essential that this unit is fixed to a wall with the fixings provided.
- We recommend the use of the wall fixing provided for safety reasons. N.B. if in doubt pls consult a qualified tradesperson. **Warning:** Always ensure the area to be drilled is free from hidden electrical wires, water and gas pipes.

CARE INFORMATION

- Never use scourers, abrasives or chemical cleaners.
- To clean wipe with a sponge and warm soapy water. Do not use solvent based cleaners or detergents as they can bleach or damage the product.







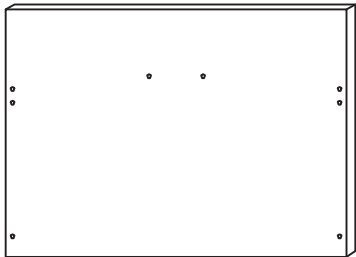
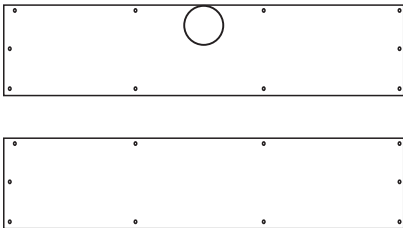
HUMPHREY TWO TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

Please check the pack contents before assembling the product. If any components are missing, please contact your retailer. The fittings pack contains small items that should be kept away from small children.



HUMPHREY TWO TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

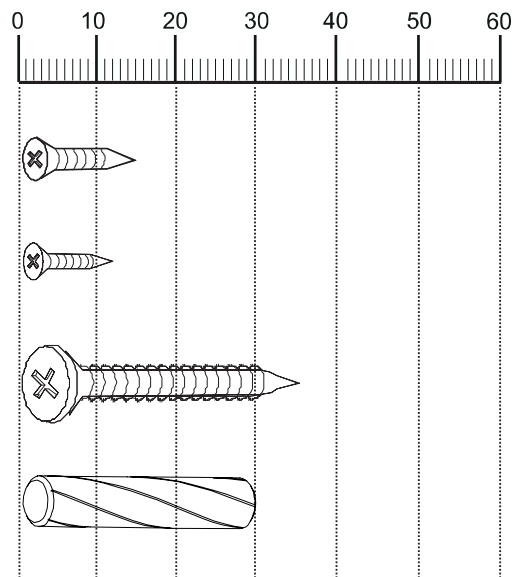
PARTS

1 	2 	3 
DESCRIPTION: LEFT SIDE PANEL QTY: 1 PC DIMENSION:805X240X15MM	DESCRIPTION: RIGHT SIDE PANEL QTY: 1 PC DIMENSION:805X240X15MM	DESCRIPTION: TOP PANEL QTY: 1 PC DIMENSION:570X239X15MM
4 	5 	6 
DESCRIPTION: SURPORT PANEL QTY: 3 PCS DIMENSION:570X50X15MM	DESCRIPTION: DRAWER BOTTOM PANEL QTY: 2 PCS DIMENSION:555X88X12MM	DESCRIPTION: SHELF PANEL QTY: 4 PCS DIMENSION:555X138X12MM
7 	8 	
DESCRIPTION: DRAWER FRONT PANEL QTY: 2 PCS DIMENSION:563X361X12MM	DESCRIPTION: BACK PANEL QTY: 2 PCS DIMENSION:594X70X3MM	

HUMPHREY TWO TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

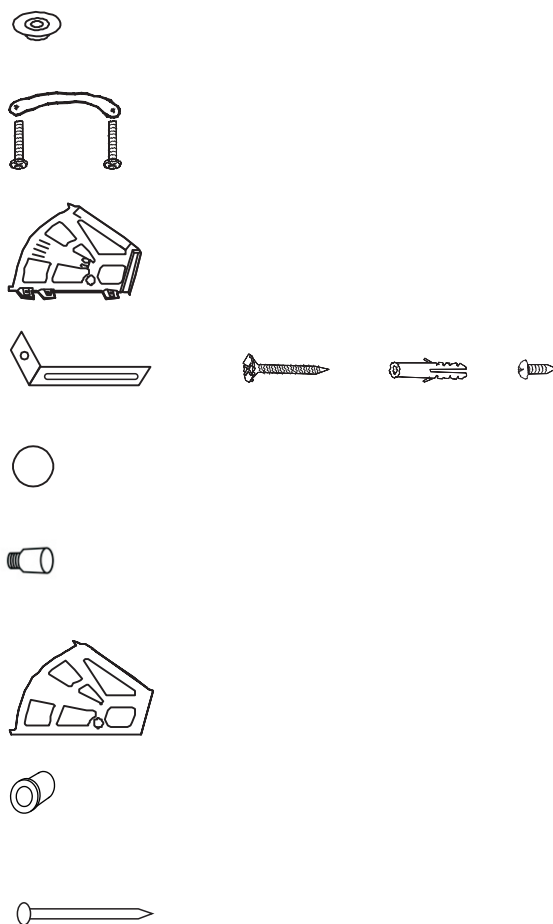
FIXINGS(TO SCALE)

Ref	Dimensions	Qty
A	SCREW-4X14mm	12
B	SCREW-4X12mm	16
E	SCREW-4X35mm	16
J	WOODEN DOWEL 8x30	2



(NOT TO SCALE)

C	OUTER AXIS	6
D	HANDLE	3
F	SIDE BRACKET	2
G	WALL FIXING HARDWARE	1
H	STICKER	16
I	STOPPER	4
K	SIDE BRACKET	2
L	INNER AXIS	4
O	NAIL	20



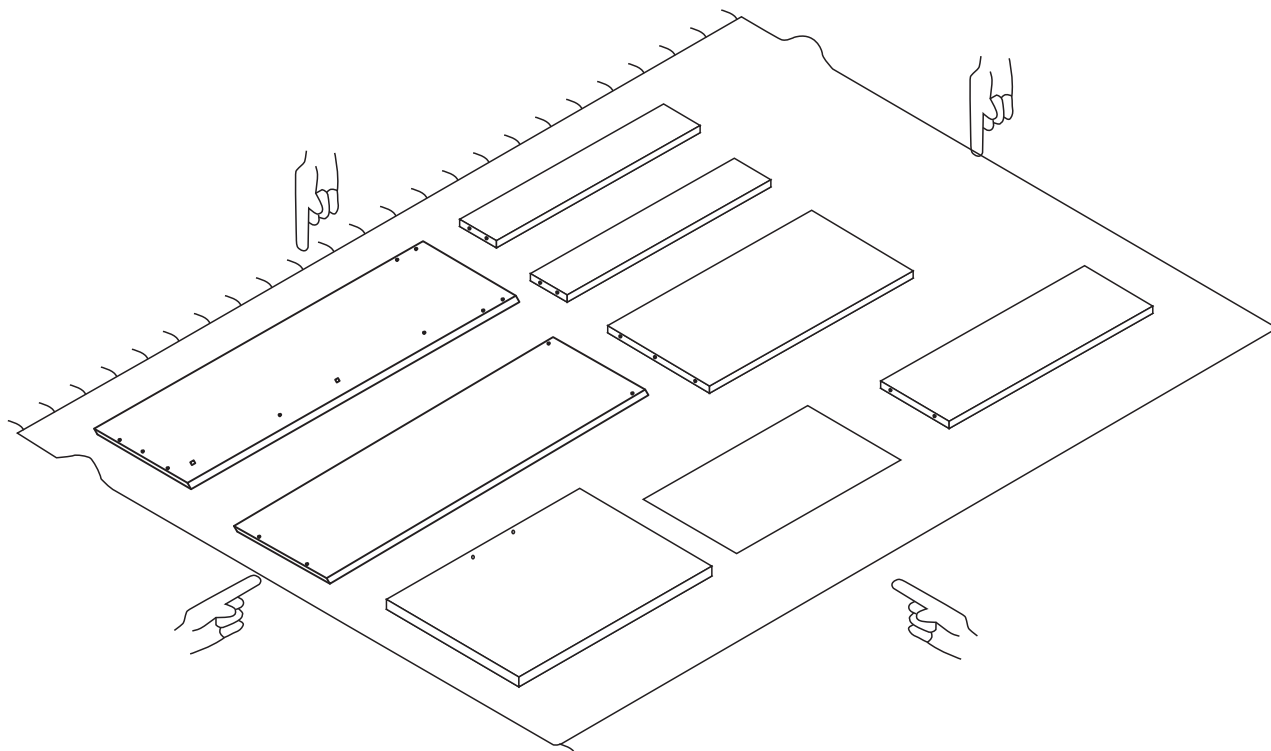
CAUTION: There are many small components used in the construction of this product. Please keep these components away from young children whilst assembling this product .

If you keep the fittings in a bowl during assembly you will be less likely to lose them!

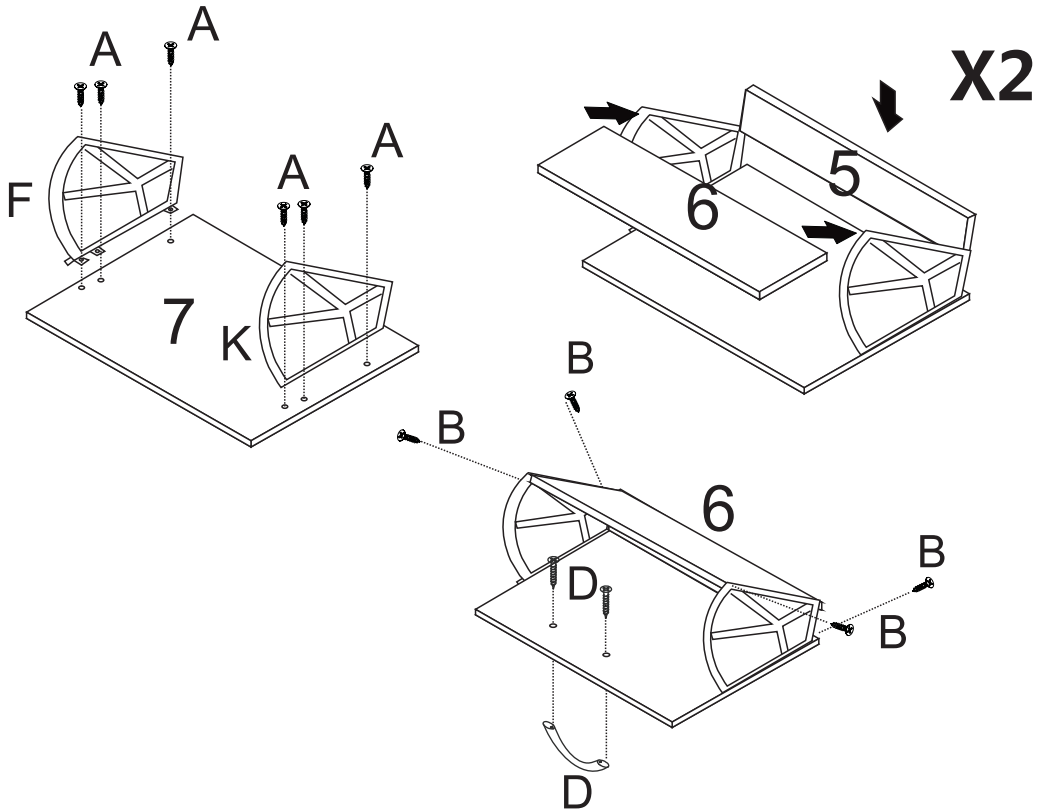
HUMPHREY TWO TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

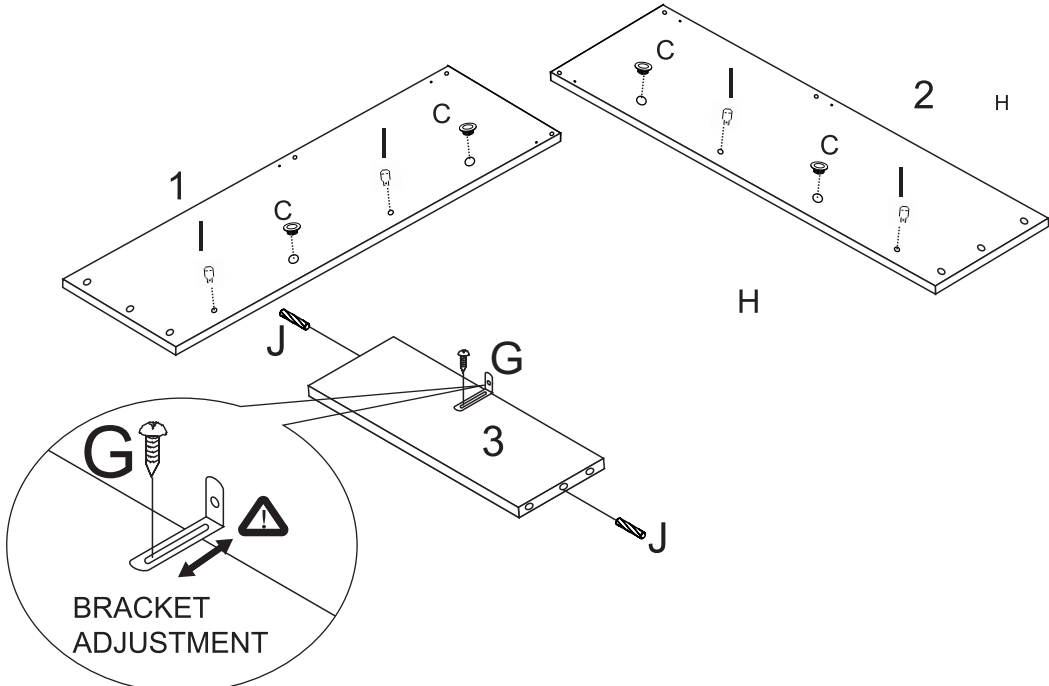
Layout Parts on Soft Surface

Lay out all parts on a soft surface i.e. Rug, Carpet or Packaging Carton

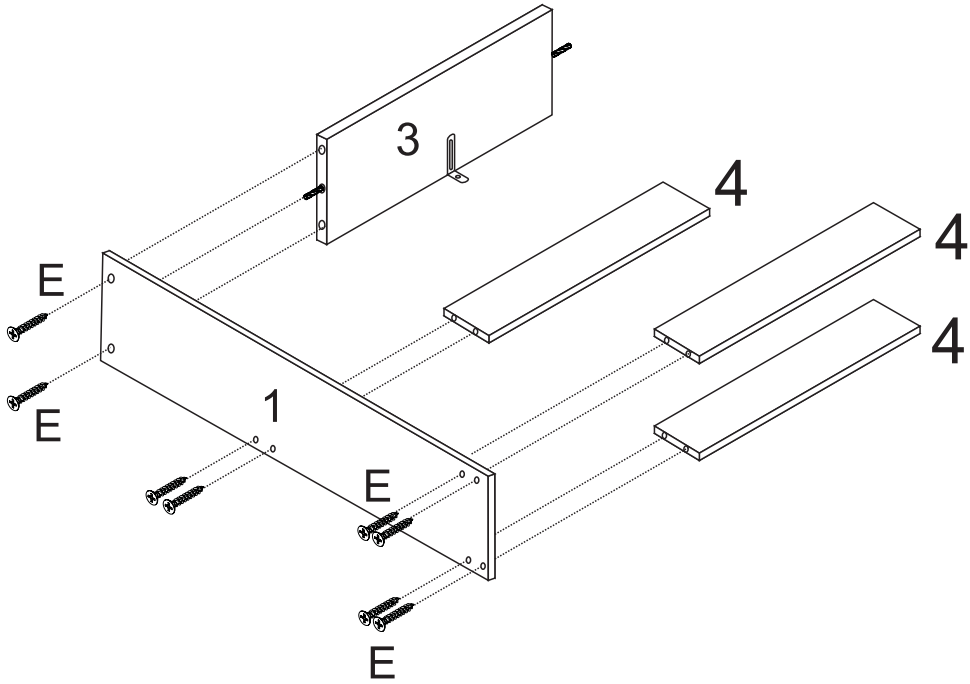


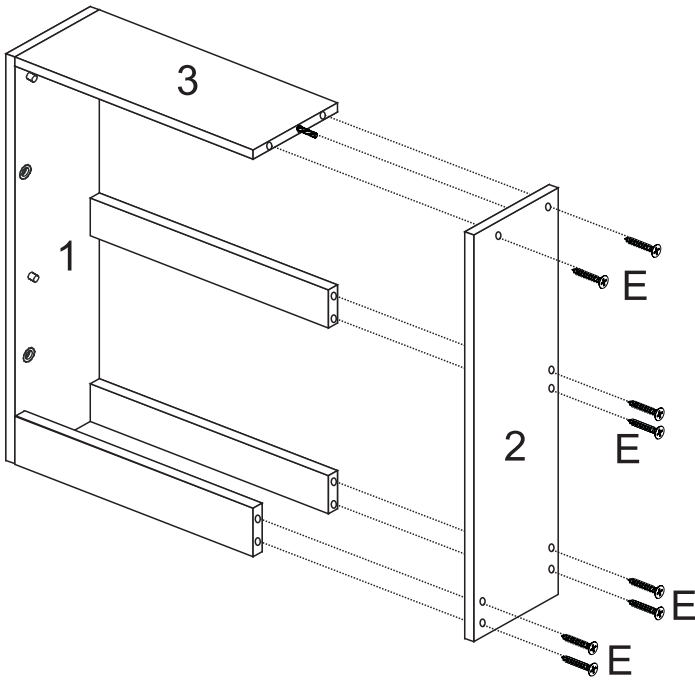
HUMPHREY TWO TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

STEP 1	Parts Required
	5: DRAWER BOTTOM PANEL x2 6: SHELF PANEL x2 7: DRAWER FRONT PANEL x2 A : SCREW X12 B : SCREW X8 D : HANDLE X2 F : SIDE BRACKET X2 K : SIDE BRACKET X2

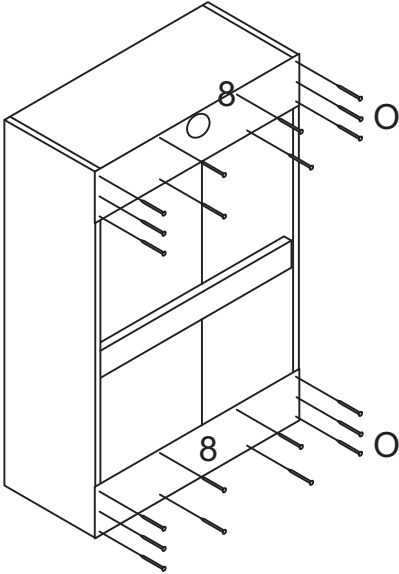
STEP 2	Parts Required
	1 : LEFT SIDE PANEL x1 2 : RIGHT SIDE PANEL x1 3 : TOP PANEL x1 C : OUTER AXIS X4 I : STOPPER X4 J: WOODEN DOWEL X2 G:WALL FIXING X1

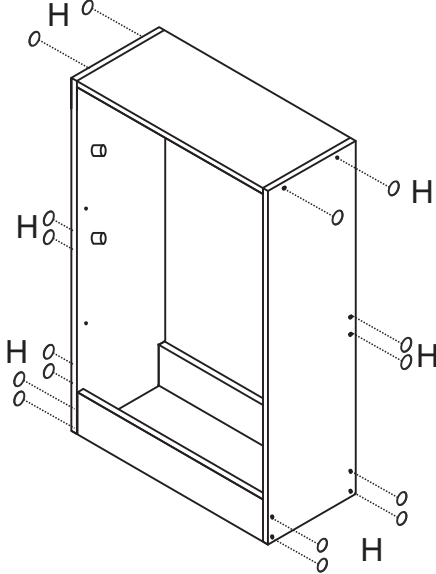
HUMPHREY TWO TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

STEP 3	Parts Required
 <p>The diagram illustrates the assembly of the left side of the cabinet. A large rectangular panel, labeled '1', is shown with four screws, each labeled 'E', being inserted into its pre-drilled holes. Above panel 1, a horizontal panel labeled '3' is shown being aligned with the top edge of panel 1. To the right of panel 1, three horizontal panels, each labeled '4', are shown being aligned with the side edge of panel 1. Dotted lines indicate the alignment and the path of the screws.</p>	<p>1 : LEFT SIDE PANEL x1 3 : TOP PANEL x1 4 : SURPORT PANEL x3 E : SCREW X8</p>

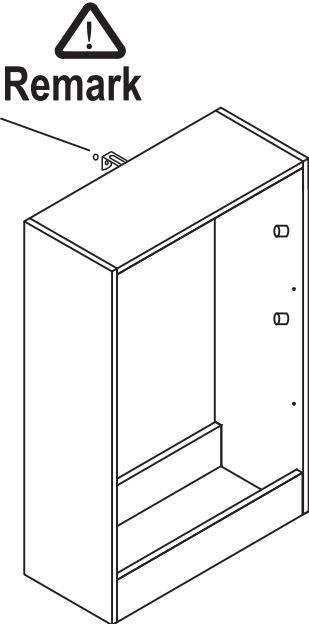
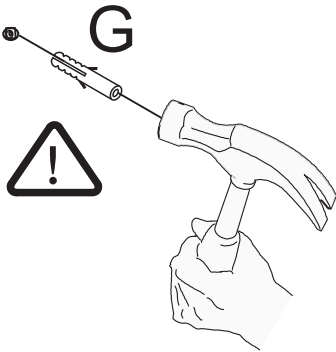
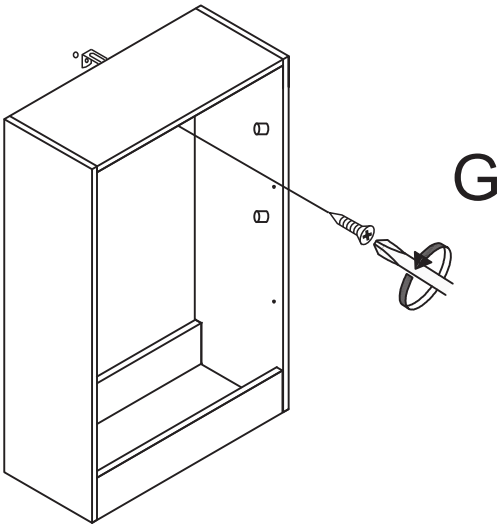
STEP 4	Parts Required
 <p>The diagram illustrates the assembly of the right side of the cabinet. A large rectangular panel, labeled '2', is shown with eight screws, each labeled 'E', being inserted into its pre-drilled holes. Above panel 2, a horizontal panel labeled '3' is shown being aligned with the top edge of panel 2. To the left of panel 2, three horizontal panels, each labeled '1', are shown being aligned with the side edge of panel 2. Dotted lines indicate the alignment and the path of the screws.</p>	<p>2 : RIGHT SIDE PANEL x1 E : SCREW X8</p>

HUMPHREY TWO TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

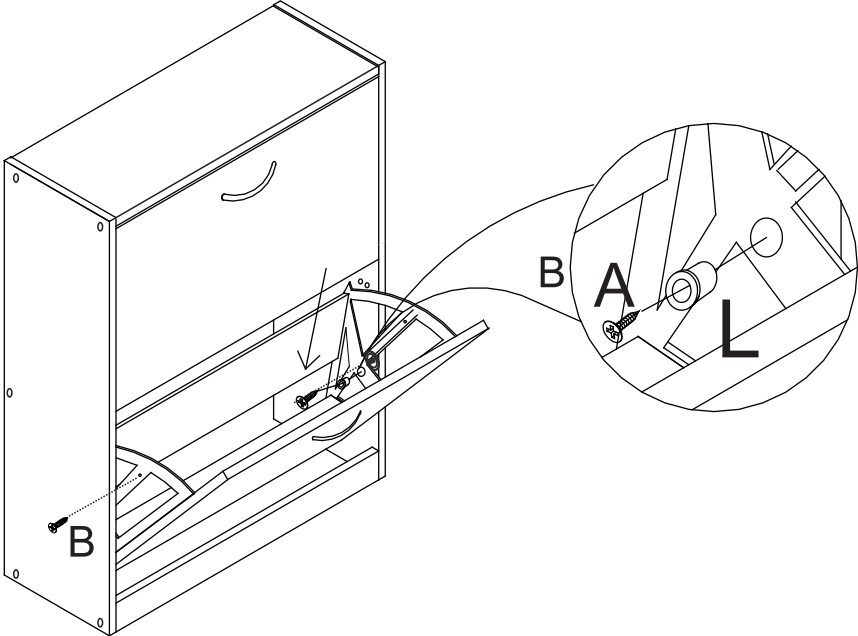
STEP 5	Parts Required
	8:BACK BOARD X2 O:NAIL X20

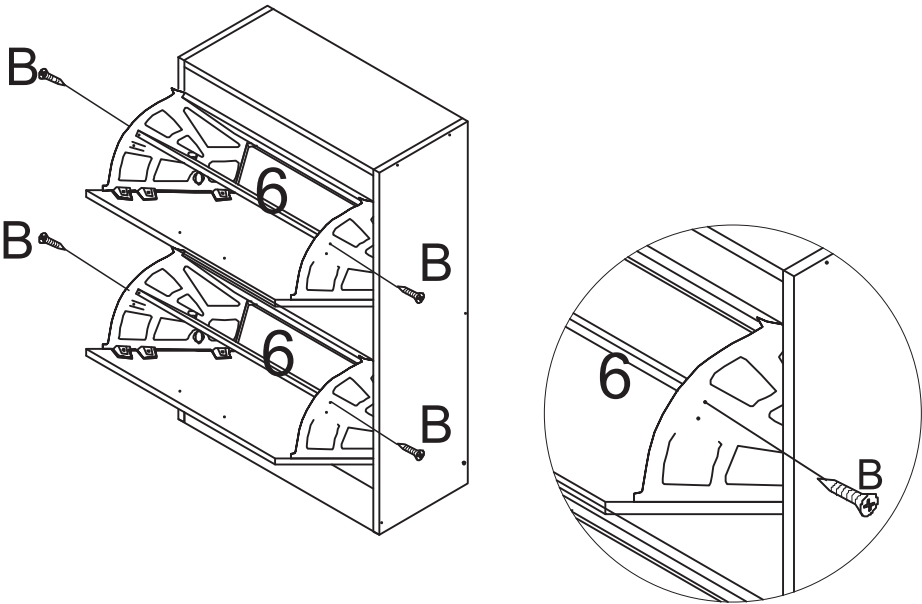
STEP 6	Parts Required
	H: STICKER X16

HUMPHREY TWO TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

STEP 7WALL FIXING	Parts Required
<div data-bbox="288 365 598 987"></div> <div data-bbox="764 987 1101 1337"></div> <div data-bbox="308 1373 807 1895"></div> <p data-bbox="118 1962 946 2036">Always ensure the area to drilled is free from hidden electrical wires, water and gas pipes.</p>	<p data-bbox="1214 333 1441 360">G:WALL FIXING X1</p>

HUMPHREY TWO TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

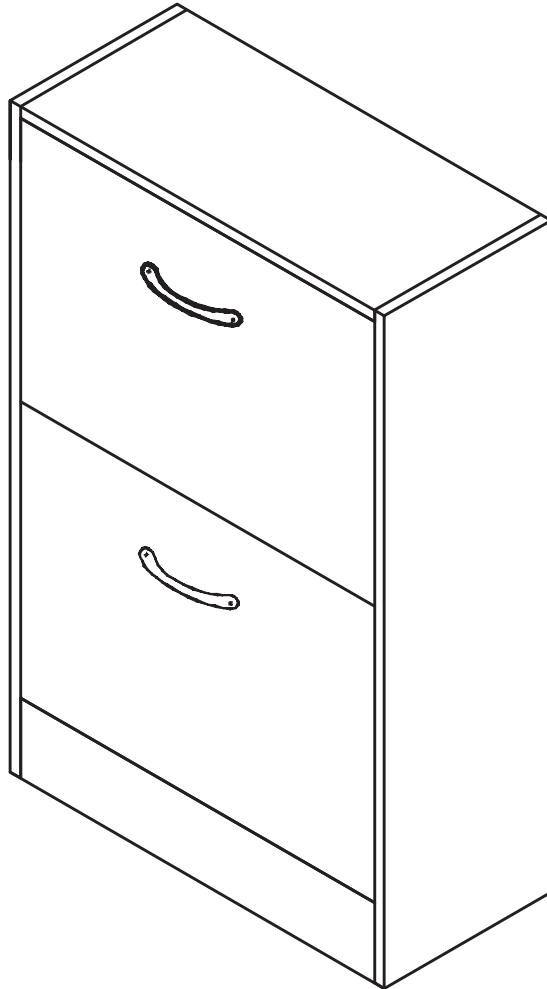
STEP 8	Parts Required
	A : SCREW X4 L : INNER AXIS X4

STEP 9	Parts Required
	6 : SHELF PANEL x2 B : SCREW X4

HUMPHREY TWO TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

Complete Assembly

Your **HUMPHREY TWO TIER SHOE CABINET** is now completely assembled. Periodically check to ensure that the components are in their proper position, free from damage. Also, make sure the connectors are tight and secure.



Keep instructions for future reference

