



# MANHATTAN 3 DRAWER BEDSIDE

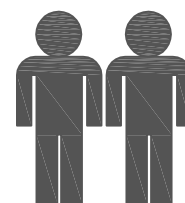

2 Person Build

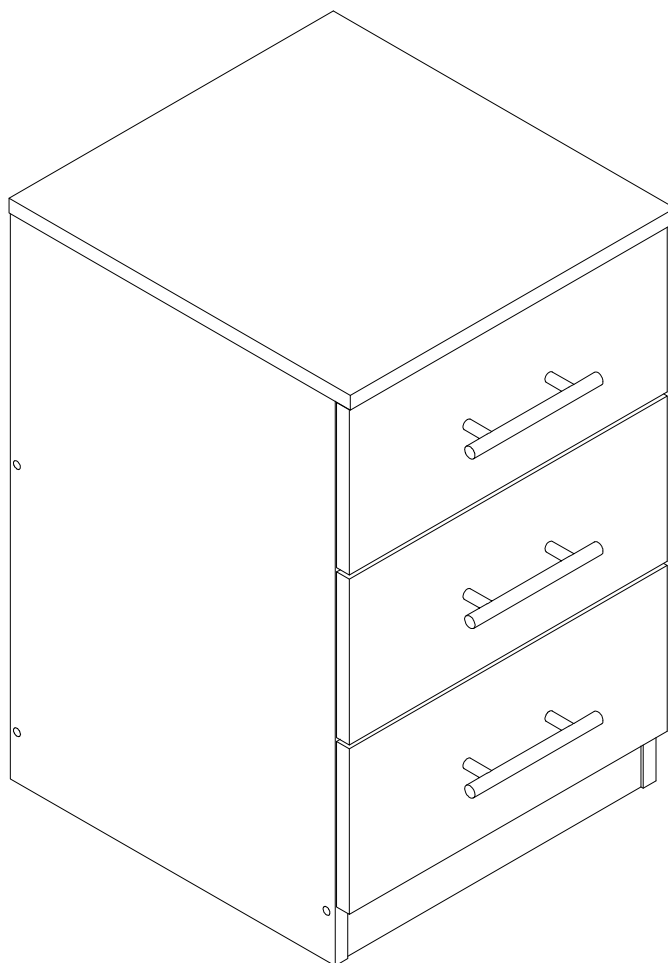

# MANHATTAN 3 DRAWER BEDSIDE

## IMPORTANT INFORMATION

### INFORMATION

- **IMPORTANT:** RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.
- Due to the size of this product we recommend that it is assembled in the room intended for use.
- When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled as illustrated before use.
- Tools not included.
- Check all screws or bolt are tightened and inspect regularly.

### WARNINGS












- Do not use power tools to construct this product.
- Do not tighten screws until fully assembled.
- Do not over tighten screws or bolts.
- Do not use this product if parts are missing, damaged or worn.
- Never use scourers, abrasives or chemical cleaners.
- Do not sit or stand on the product.

### CARE INFORMATION















- Never use scourers, abrasives or chemical cleaners.
- To clean wipe with a sponge and warm soapy water. Do not use solvent based cleaners or detergents as they can bleach or damage the product.

# MANHATTAN 3 DRAWER BEDSIDE
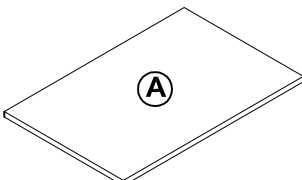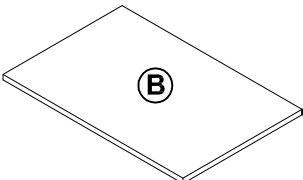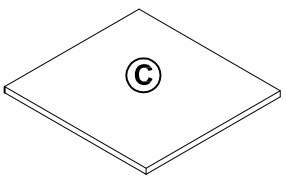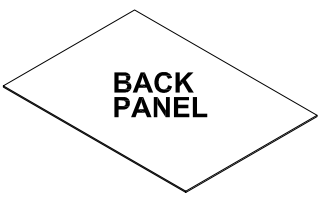
## PARTS






		
 (x2)		 (x3)
 (x3)	 (x3)	 (x3)
	 (x3)	



## FIXINGS

 D8 x 30mm 26 x	 Drawer Slide - 350mm 3 x	 Drawer Slide - 350mm 3 x	 Minifix Cam 10 x	 Minifix Bolt 10 x
 M4 x 38mm 12 x	 M3.5 x 15mm 24 x	 Bar Handle - 150mm 3 x	 M4 x 20mm 6 x	 Nail Leg 4 x
 Nail Pin 12 x	 Allen Key 1 x	 M6.3 x 40mm 6 x	 Seal Sticker 6 x	

# MANHATTAN 3 DRAWER BEDSIDE



## STEP 1

<b>d</b> Minifix Cam  10 x	<b>e</b> Minifix Bolt  10 x	<b>a</b> D8 x 30mm  26 x	<b>b</b> Drawer Slide - 350mm  3 x
			<b>g</b> M3.5 x 15mm  12 x

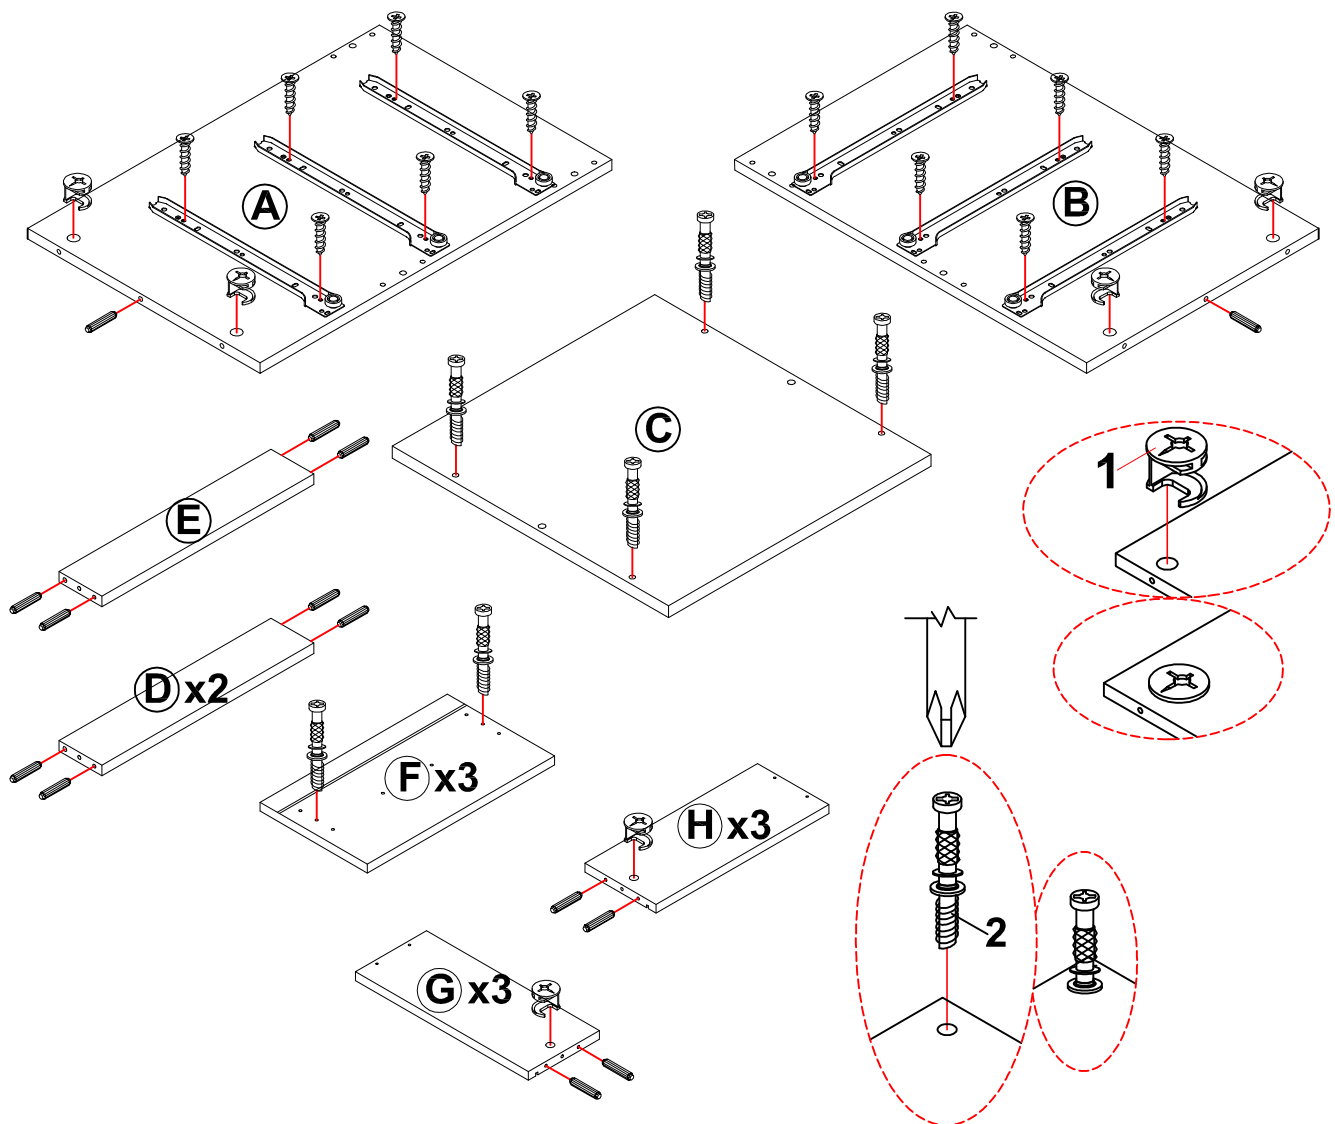
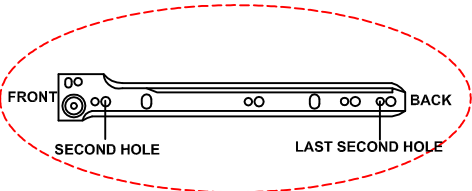


# MANHATTAN 3 DRAWER BEDSIDE

## STEP 2

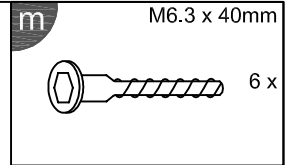
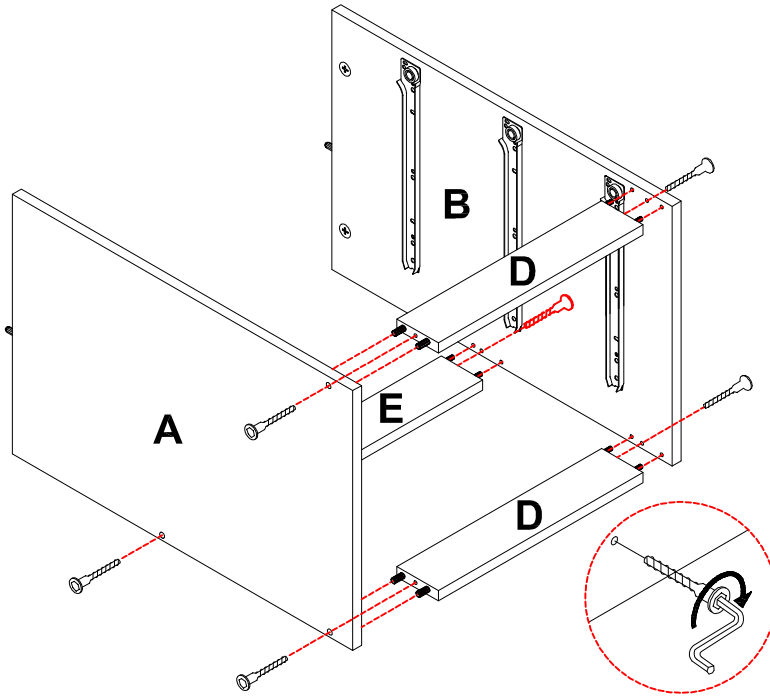


## STEP 3

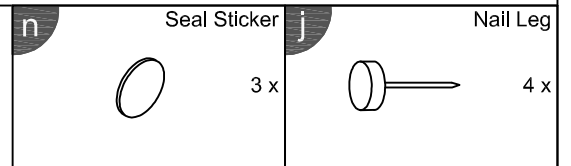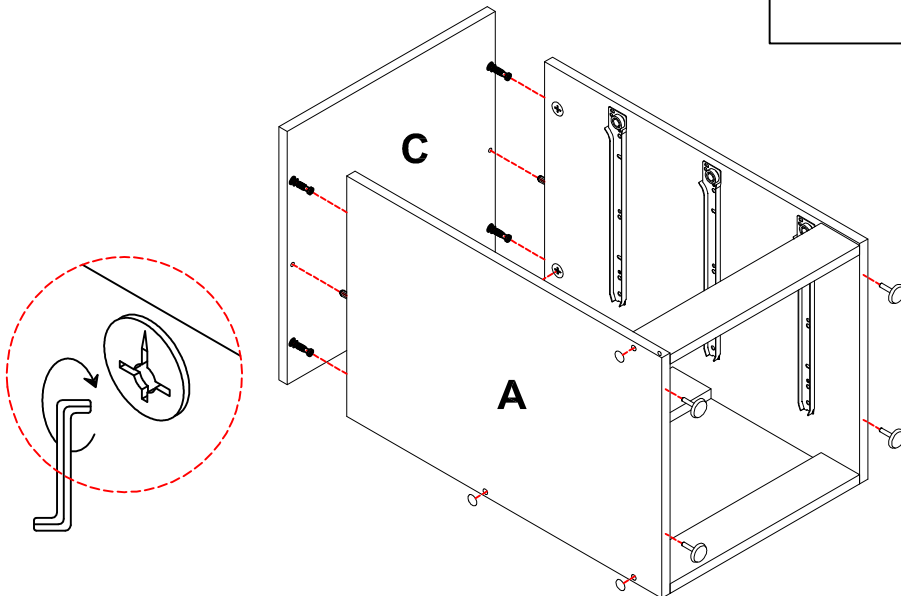


# MANHATTAN 3 DRAWER BEDSIDE

**STEP 4**

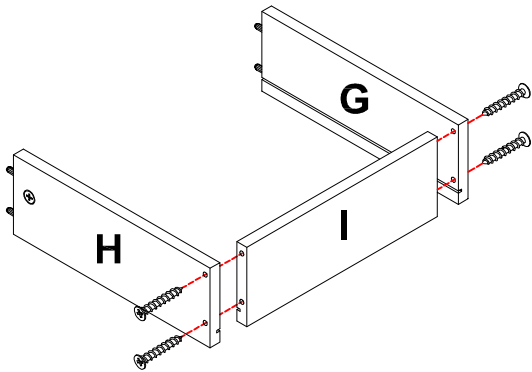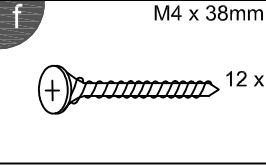





(x3)

**STEP 5**

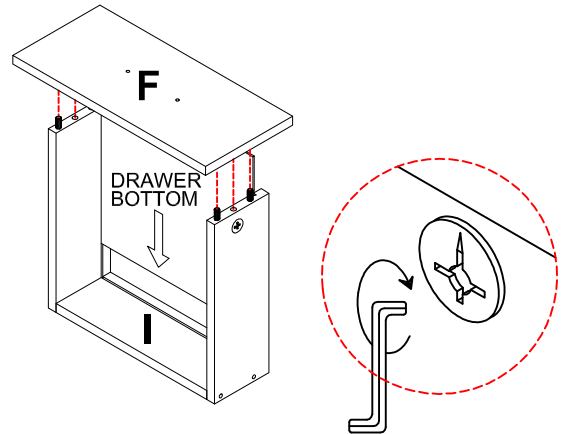



(x3)

**STEP 6**

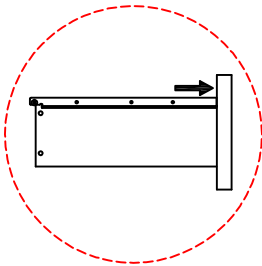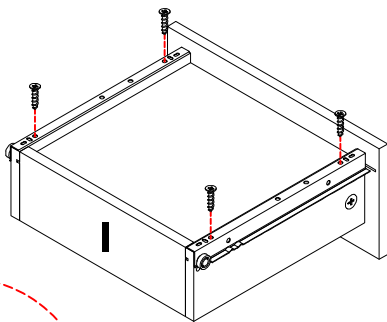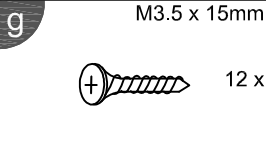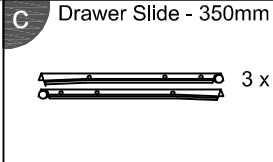

(x3)



**STEP 7**

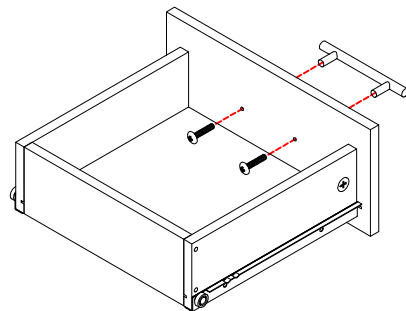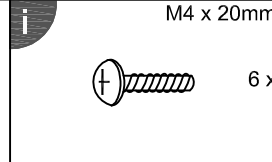

(x3)

# MANHATTAN 3 DRAWER BEDSIDE

## STEP 8

n	Seal Sticker	k	Nail Pin	
		3 x		12 x

