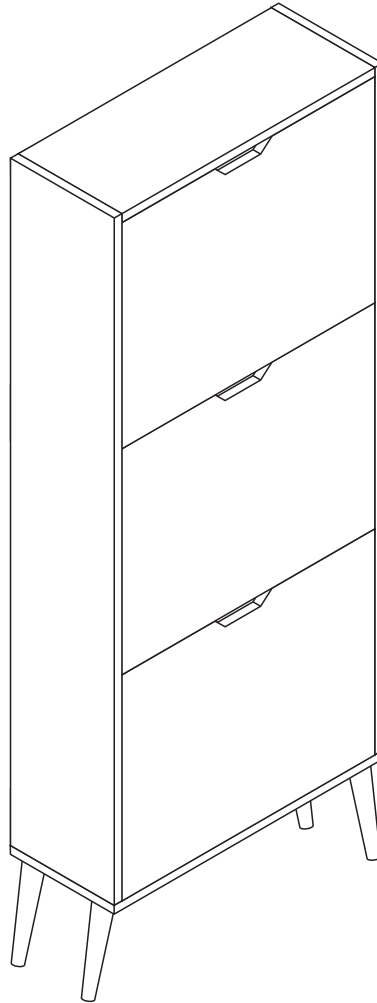


STOCKHOLM THREE TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

Thank you for purchasing the **STOCKHOLM THREE TIER SHOE CABINET**. Please read the instructions carefully to ensure safe operation of the product.





Size: W47.0 x D23.0 x H125.5cm
COLOUR: WHITE & OAK

PLEASE READ this sheet prior to assembly to familiarise yourself with the various stages of construction.

Carefully open the pack supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

CAUTION: There are small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit to avoid the danger of choking hazards.

Tools Required



1.5 Hour
Set Up

STOCKHOLM THREE TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

**IMPORTANT - READ CAREFULLY - RETAIN THESE INSTRUCTIONS
FOR FUTURE REFERENCE.**

INFORMATION

- This product is intended for a maximum load of 20 kg spread evenly thorough the storage compartments. Do not exceed this weight.
- Due to the size of this product we recommend that it is assembled in the room intended for use.
- When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled as illustrated before use.
- Check all screws or bolts are tightened and inspect regularly.
- This product should only be used on firm, level ground.
- Tools are not included.

WARNINGS

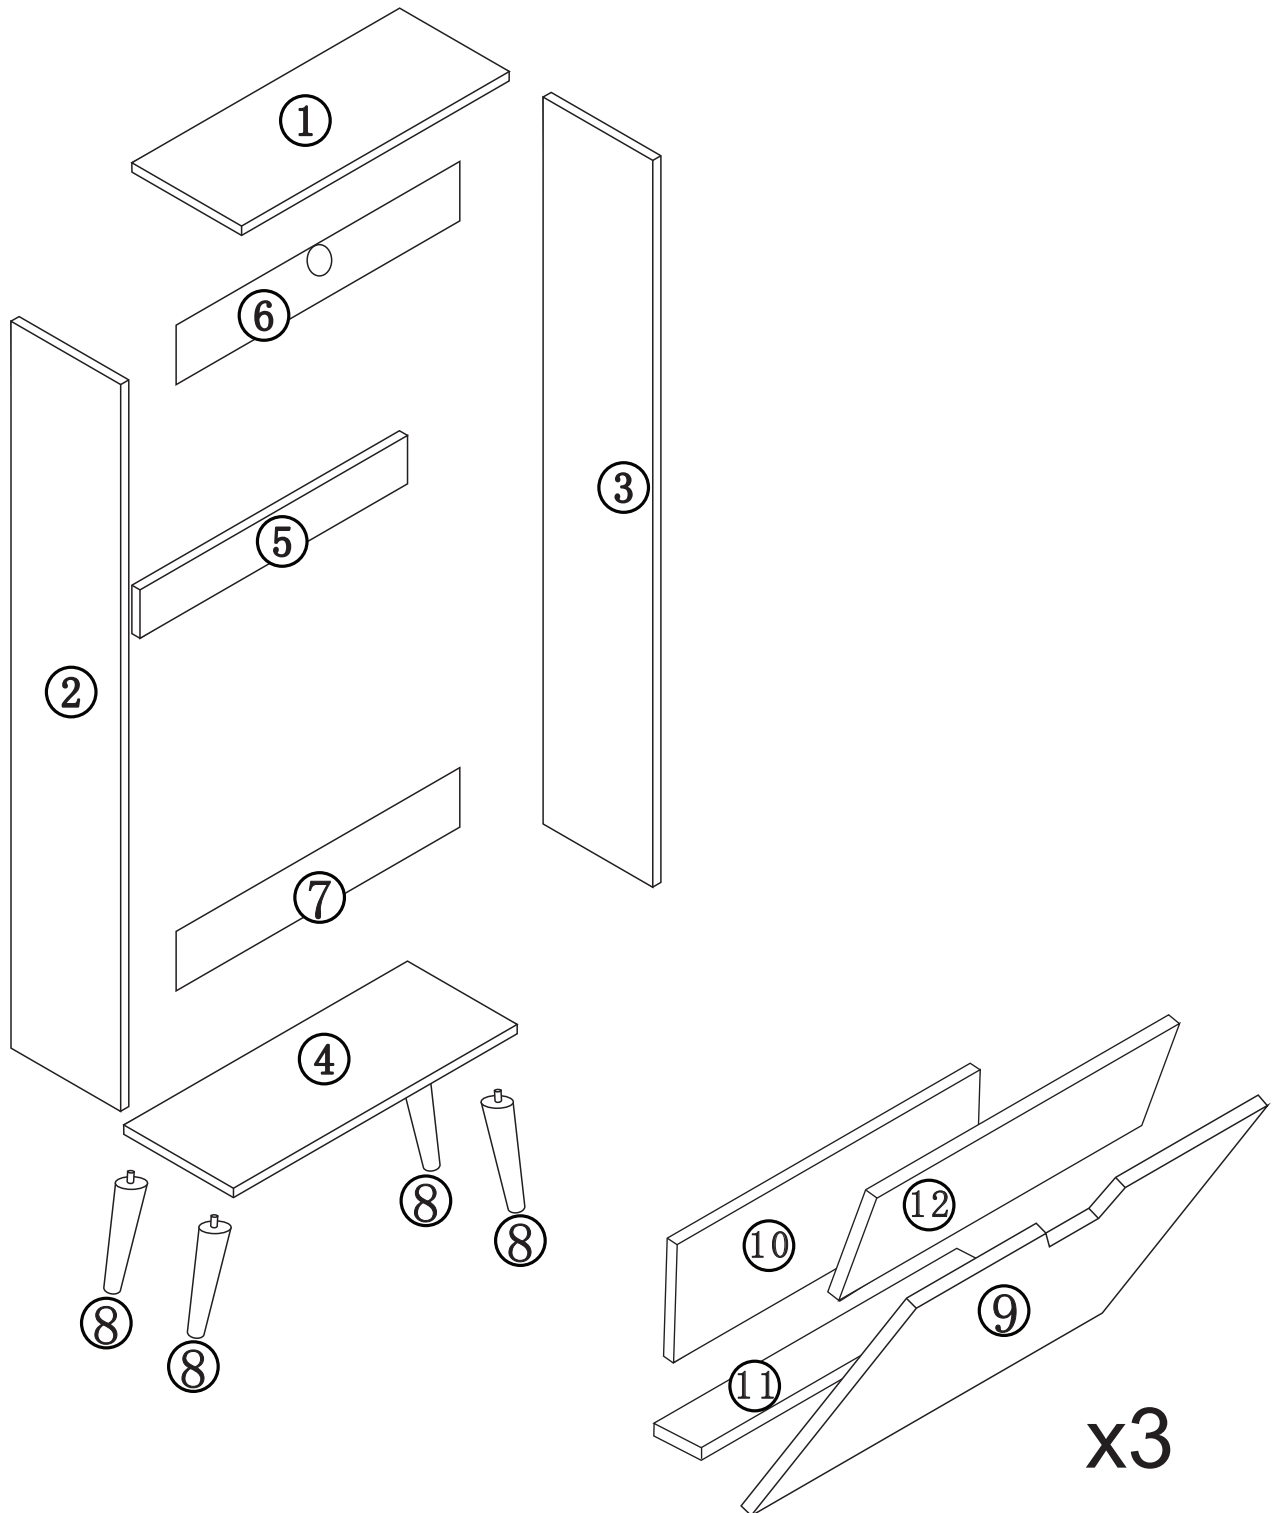
- DO make sure the legs remain in contact with the ground.
- DO keep small parts out of reach of children.
- DO NOT use power tools to construct this product.
- DO NOT tighten screws until fully assembled.
- DO NOT over tighten screws or bolts.
- DO NOT use this product if parts are missing, damaged or worn.
- DO NOT sit or stand on the product.
- DO NOT use this item if any components are missing or damaged.
- It is essential that this unit is fixed to a wall with the fixings provided.
- We recommend the use of the wall fixing provided for safety reasons. N.B. if in doubt pls consult a qualified tradesperson. **Warning:** Always ensure the area to be drilled is free from hidden electrical wires, water and gas pipes.

CARE INFORMATION

- Never use scourers, abrasives or chemical cleaners.
- To clean wipe with a sponge and warm soapy water. Do not use solvent based cleaners or detergents as they can bleach or damage the product

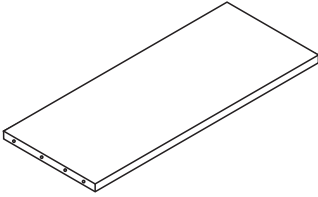
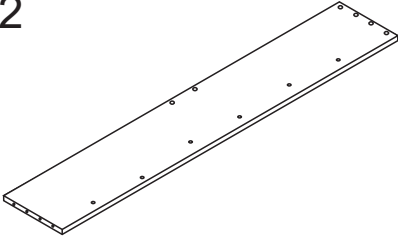
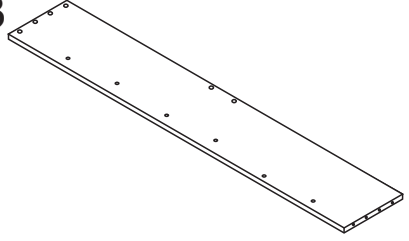
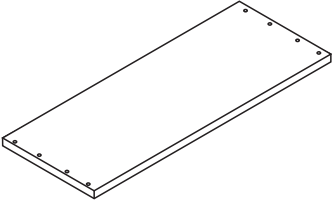
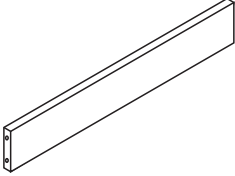
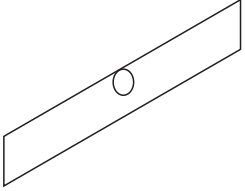
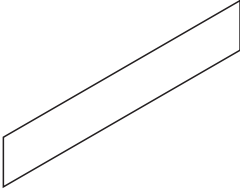

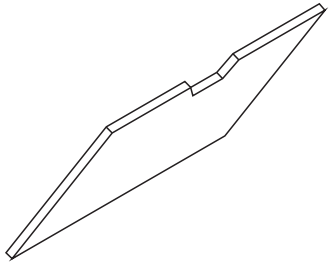
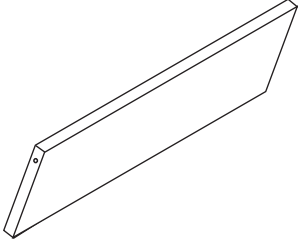
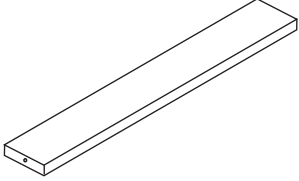
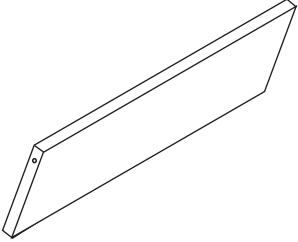
STOCKHOLM THREE TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

Please check the pack contents before assembling this product. If any components are missing, please contact your retailer. The fittings pack contains small items that should be kept away from small children.



STOCKHOLM THREE TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

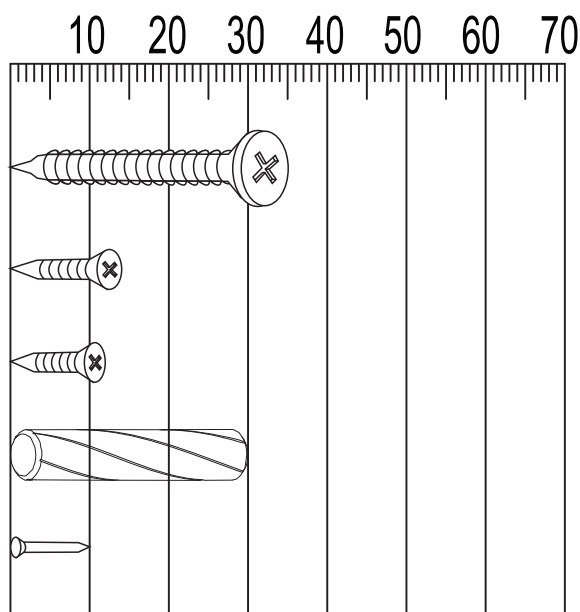
PARTS

1 	2 	3 
DESCRIPTION:TOP PANEL QTY:1 PC DIMENSIONS:440X230X15MM	DESCRIPTION:LEFT SIDE PANEL QTY:1 PC DIMENSIONS:1135X230X15MM	DESCRIPTION:RIGHT SIDE PANEL QTY:1 PC DIMENSIONS:1135X230X15MM
4 	5 	6 
DESCRIPTION:BOTTOM PANEL QTY:1 PC DIMENSIONS:470X230X15MM	DESCRIPTION:SUPPORT PANEL QTY:1 PC DIMENSIONS:440X50X15MM	DESCRIPTION:UPSIDE BACK PANEL QTY:1 PC DIMENSIONS:458X75x3MM
7 	8 	9 
DESCRIPTION:UNDERSIDE PACK PANEL QTY:1 PC DIMENSIONS:458X75x3MM	DESCRIPTION:WOODEN LEGS QTY:4 PCS DIMENSIONS:100XØ35 X Ø25MM	DESCRIPTION:DRAWER FRONT PANEL QTY:3 PCS DIMENSIONS:434X365X12MM
10 	11 	12 
DESCRIPTION:DRAWER BACK SHELF PANEL QTY:3 PCS DIMENSIONS:424X138X12MM	DESCRIPTION:DRAWER BOTTOM PANEL QTY:3 PCS DIMENSIONS:424X89X12MM	DESCRIPTION:DRAWER SHELF PANEL QTY:3 PCS DIMENSIONS:424X138X12MM

STOCKHOLM THREE TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

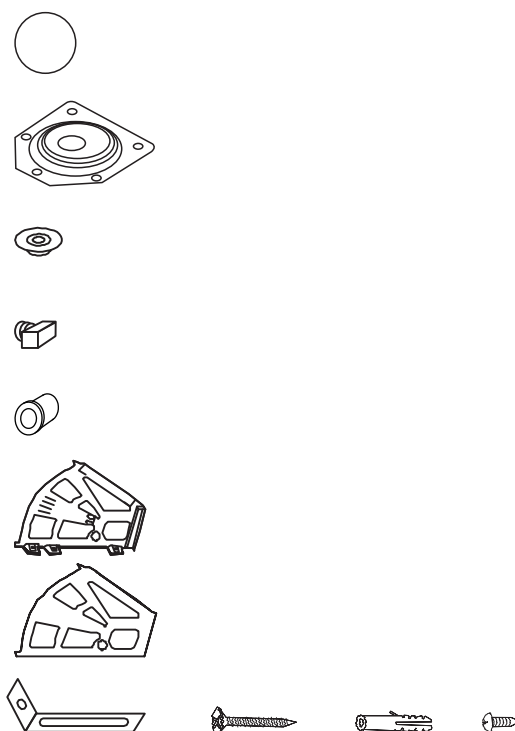
FIXINGS (TO SCALE)

Ref	Dimensions	Qty
A	SCREWS (4x35mm)	12
B	SCREWS (4x14mm)	18
C	SCREWS (4x12mm)	38
D	DOWEL (6X30MM)	8
E	NAIL (1.5x10mm)	15



NOT TO SCALE

F	STICKERS	8
G	LEG BRACKETS	4
H	OUTER AXIS	6
I	STOPPER	6
J	INNER AXIS	6
K	LEFT SIDE BRACKET	3
L	RIGHT SIDE BRACKET	3
M	WALL FIXING HARDWARE	1



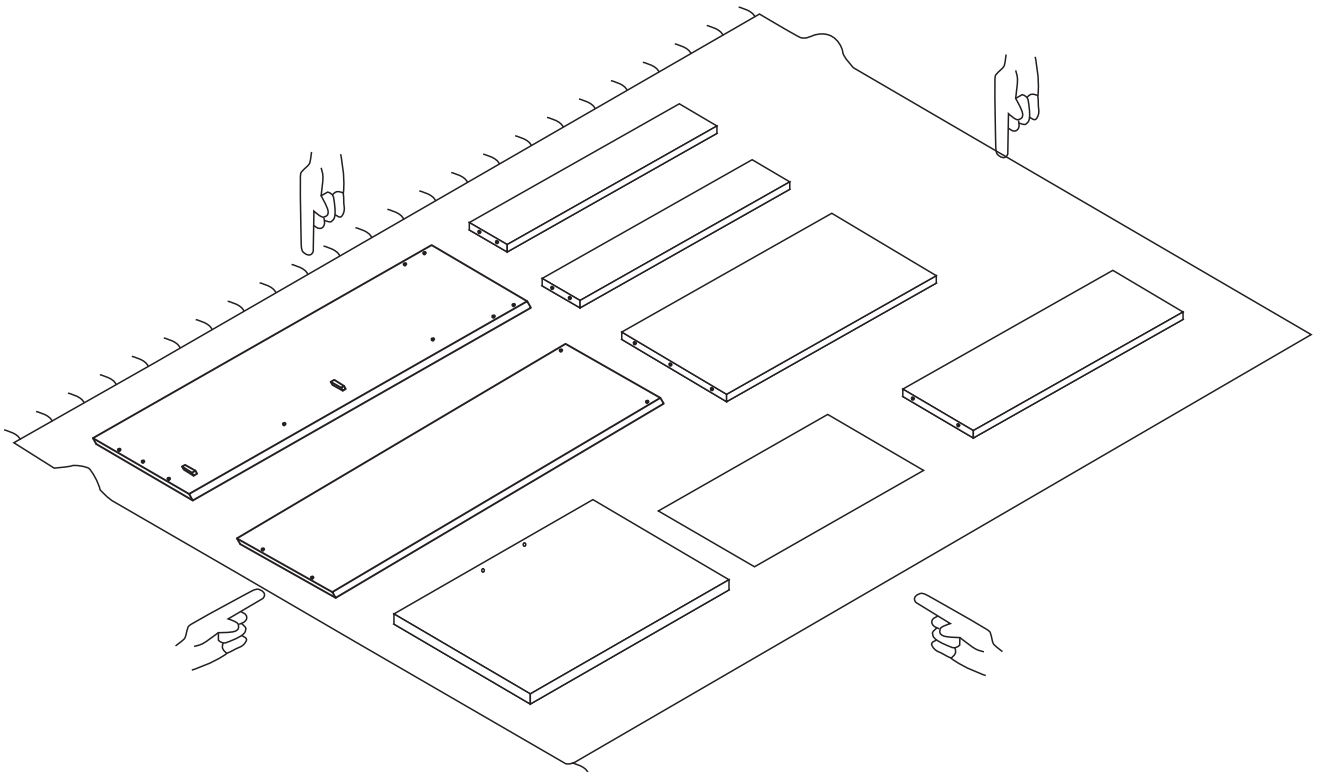
CAUTION: There are many small components used in the construction of this product. Please keep these components away from young children whilst assembling this product.

If you keep the fittings in a bowl during assembly you will be less likely to lose them!

STOCKHOLM THREE TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

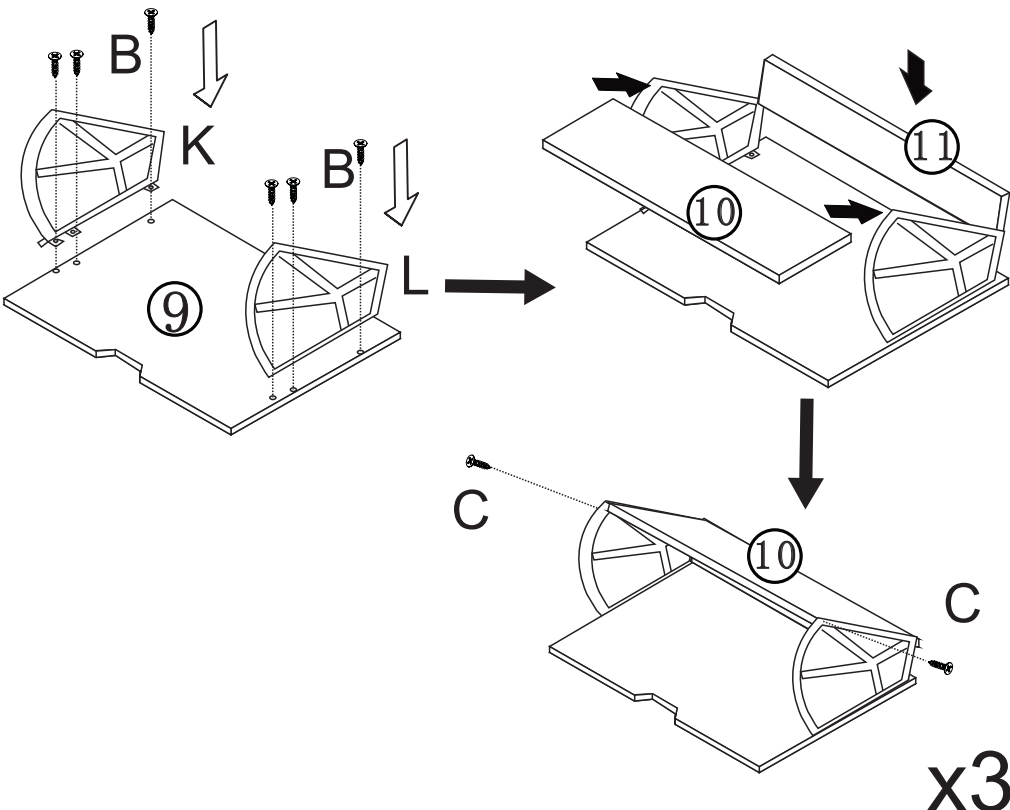
Layout Parts on Soft Surface

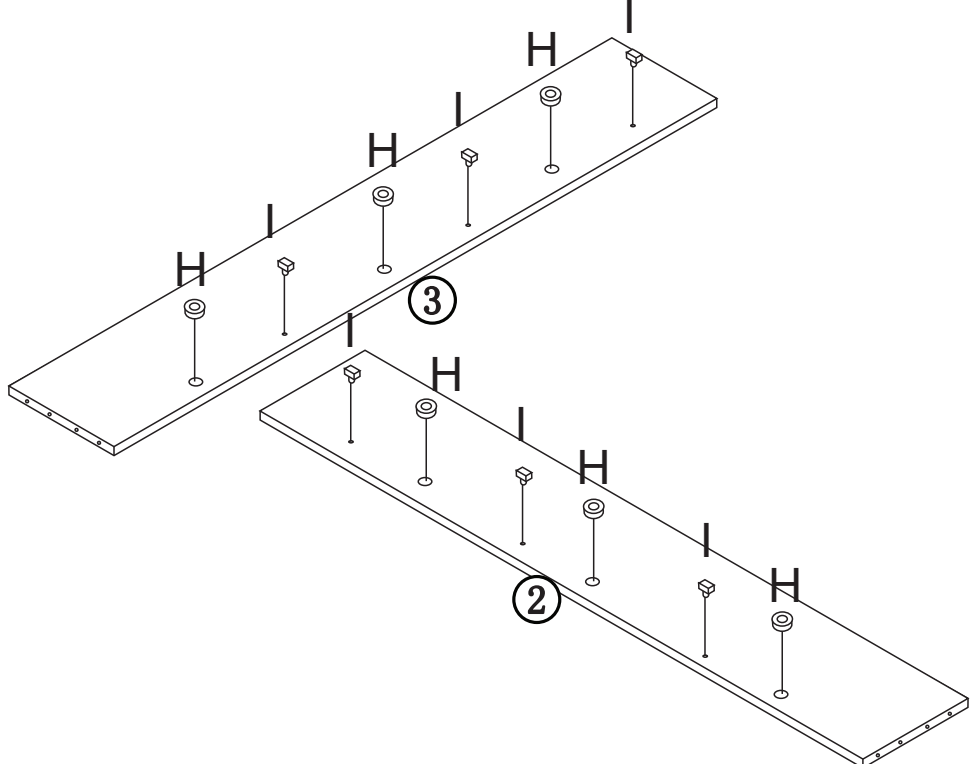
Layout all part on a soft surface i.e. Rug,carpet or packaging carton



STOCKHOLM THREE TIER SHOE CABINET

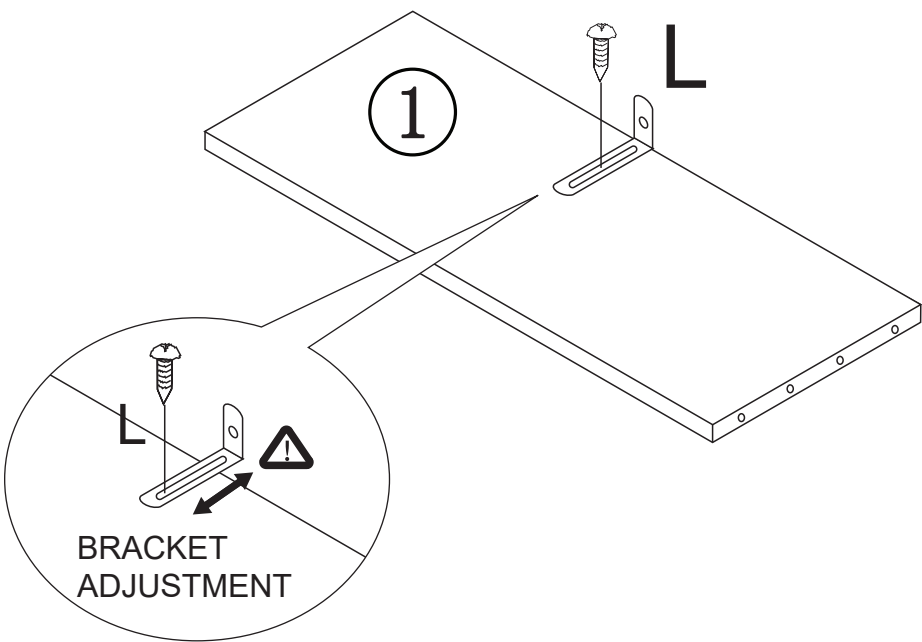
ASSEMBLY INSTRUCTIONS

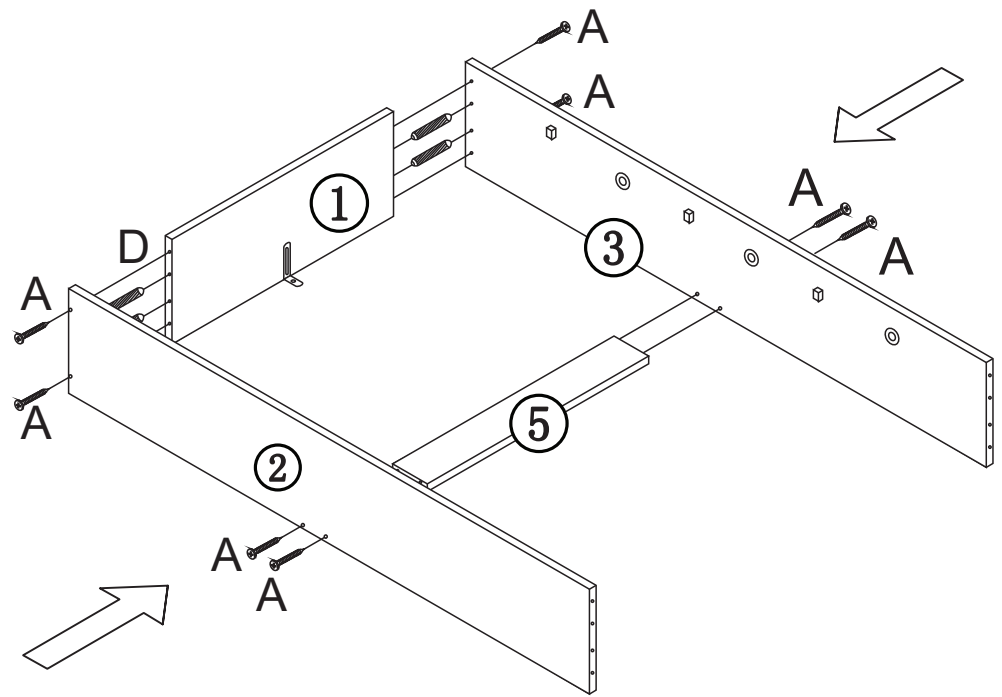
STEP 1	PARTS REQUIRED
 <p>Diagram illustrating the assembly of the drawer unit. The steps show the attachment of the drawer front panel (9) to the drawer back shelf panel (10) using screws B. The drawer bottom panel (11) is then attached to the back shelf panel (10) using screws C. The assembly is shown for three drawers (x3).</p>	<p>9: DRAWER FRONT PANEL X3 10: DRAWER BACK SHELF PANEL X3 11: DRAWER BOTTOM PANEL X3</p> <p>B: SCREWS X6 C: SCREWS X18 K: LEFT SIDE BRACKET X3 L: RIGHT SIDE BRACKET X3</p>

STEP 2	PARTS REQUIRED
 <p>Diagram illustrating the assembly of the side panels. The left side panel (2) and right side panel (3) are shown being attached to the main structure using outer axes H and stoppers I.</p>	<p>2: LEFT SIDE PANEL X1 3: RIGHT SIDE PANEL X1</p> <p>H: OUTER AXIS X6 I: STOPPER X 6</p>

STOCKHOLM THREE TIER SHOE CABINET

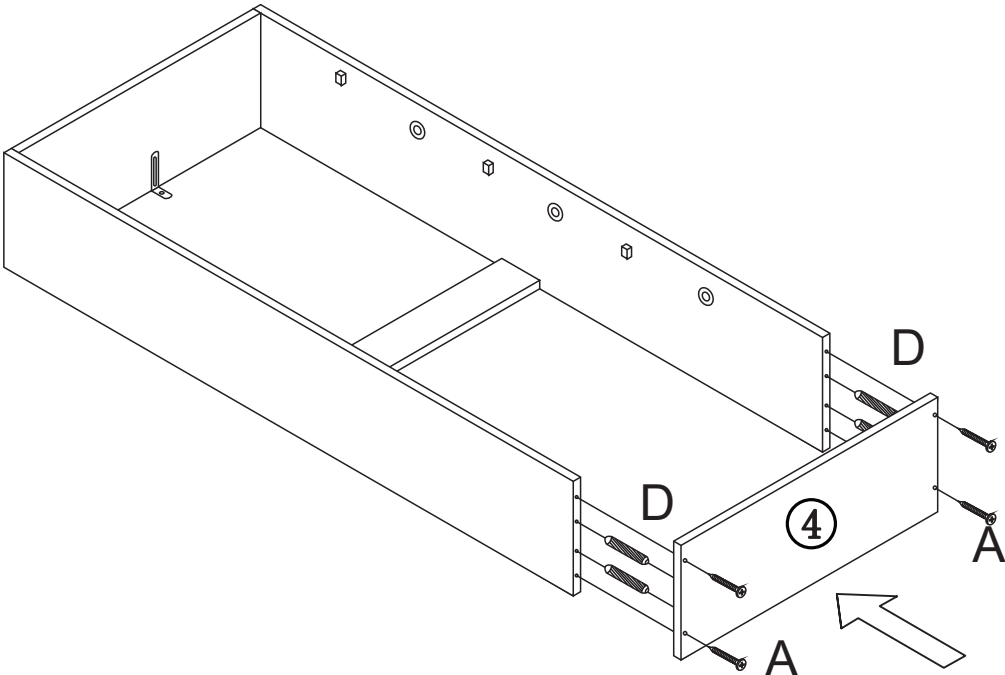
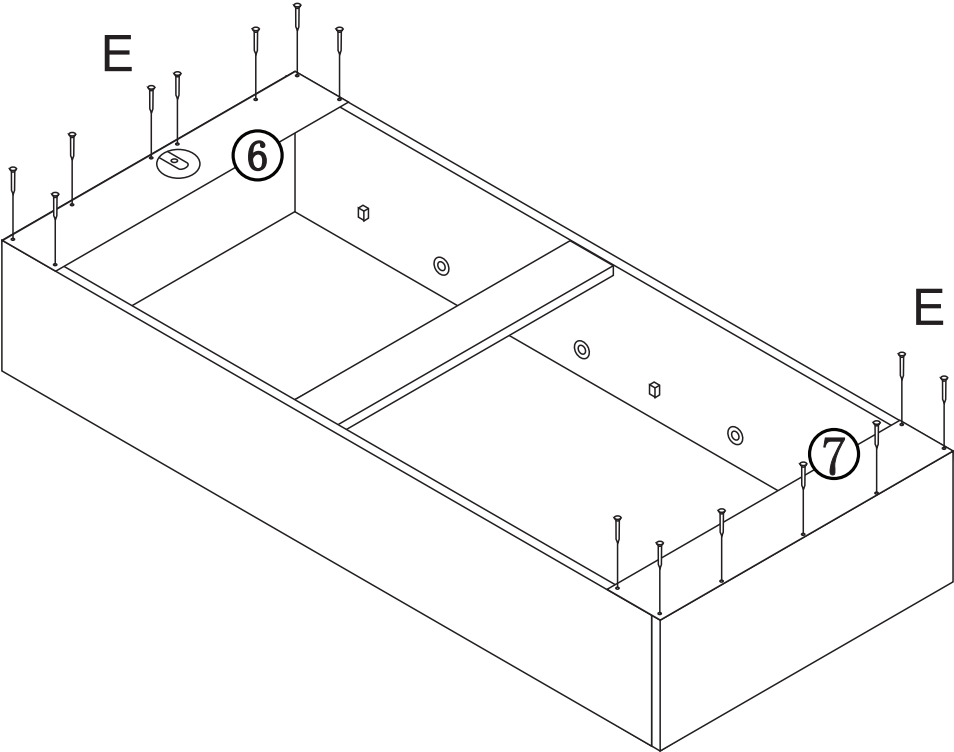
ASSEMBLY INSTRUCTIONS

STEP 3	PARTS REQUIRED
 <p>1: TOP PANEL X1</p> <p>L: WALL FIXING X1</p> <p>BRACKET ADJUSTMENT</p>	

STEP 4	PARTS REQUIRED
 <p>1: TOP PANEL X1</p> <p>2: LEFT SIDE PANEL X1</p> <p>3: BOTTOM PANEL X1</p> <p>5: RIGHT SIDE PANEL X1</p> <p>A: SCREWS X8</p> <p>D: DOWEL X4</p>	

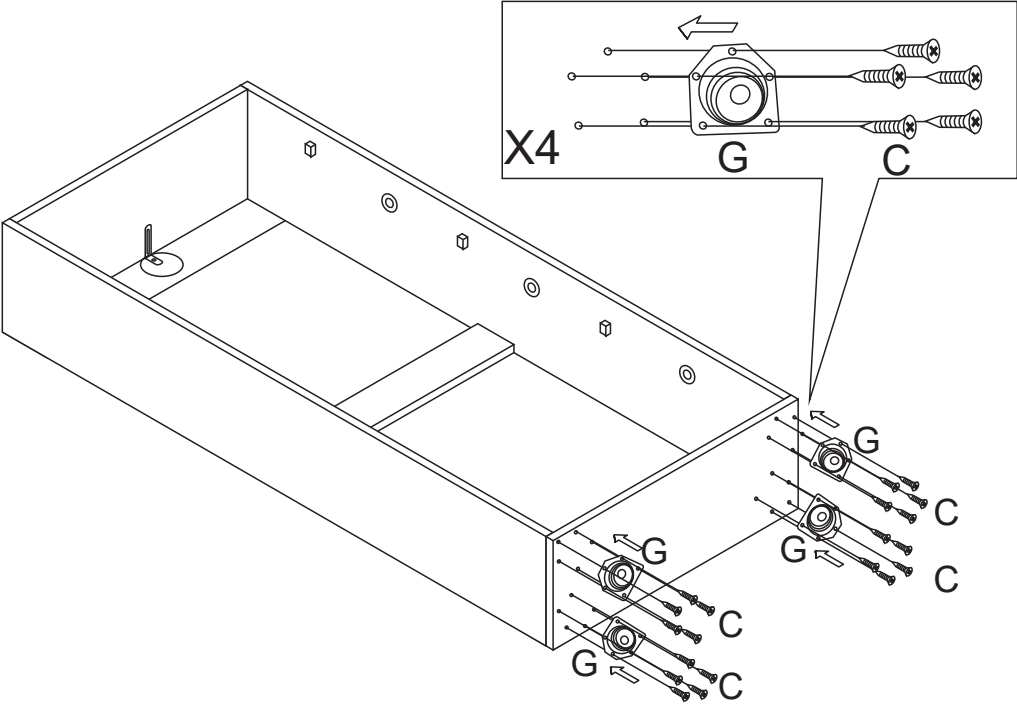
STOCKHOLM THREE TIER SHOE CABINET

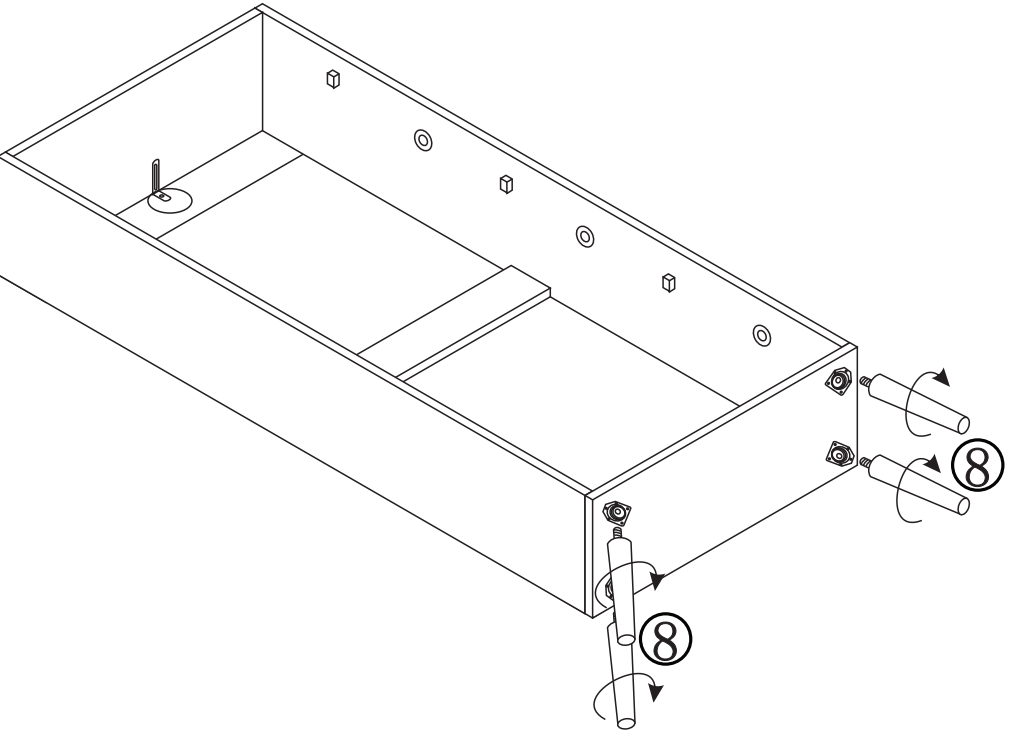
ASSEMBLY INSTRUCTIONS

STEP 5	PARTS REQUIRED
	<p>4: BOTTOM PANEL X1</p> <p>A: SCREWS X4</p> <p>D: DOWEL X4</p>
STEP 6	PARTS REQUIRED
	<p>6: UPSIDE BACK PANEL X1</p> <p>7: UNDERSIDE BACK PANEL X1</p> <p>E: NAIL X15</p>

STOCKHOLM THREE TIER SHOE CABINET

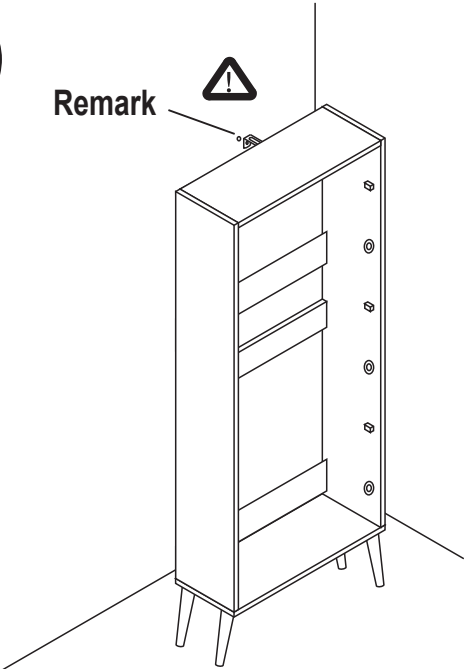
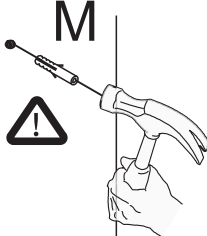
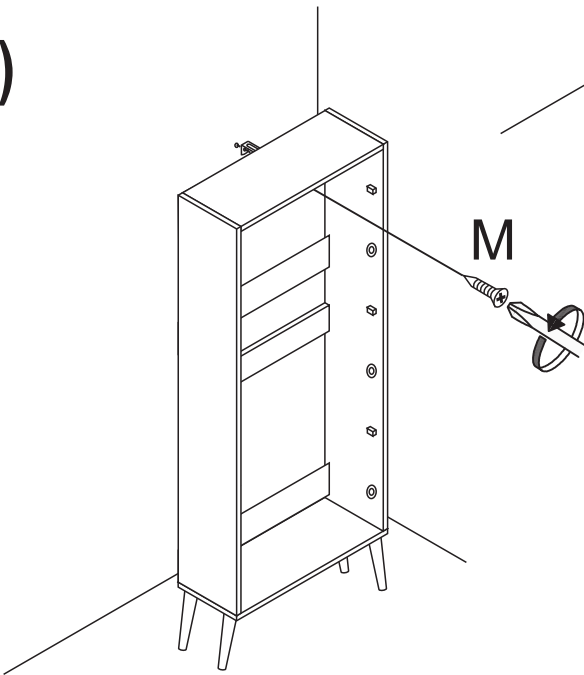
ASSEMBLY INSTRUCTIONS

STEP 7	PARTS REQUIRED
 <p>X4 G C</p>	<p>C:SCREWS X20 G:LEG BRACKETS X4</p>

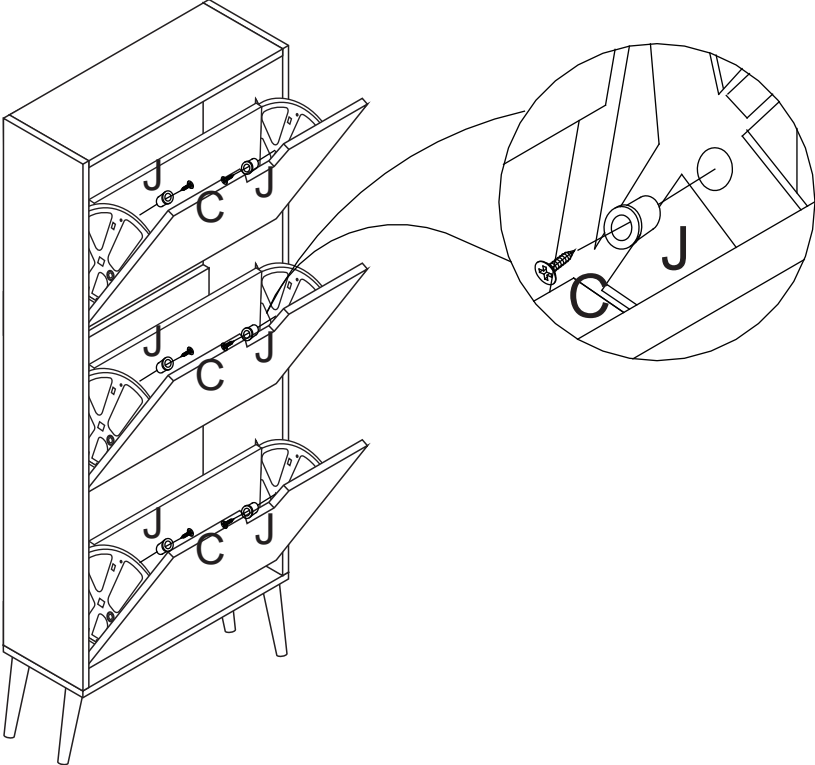
STEP 8	PARTS REQUIRED
 <p>8</p>	<p>8:WOODEN LEGS X4</p>

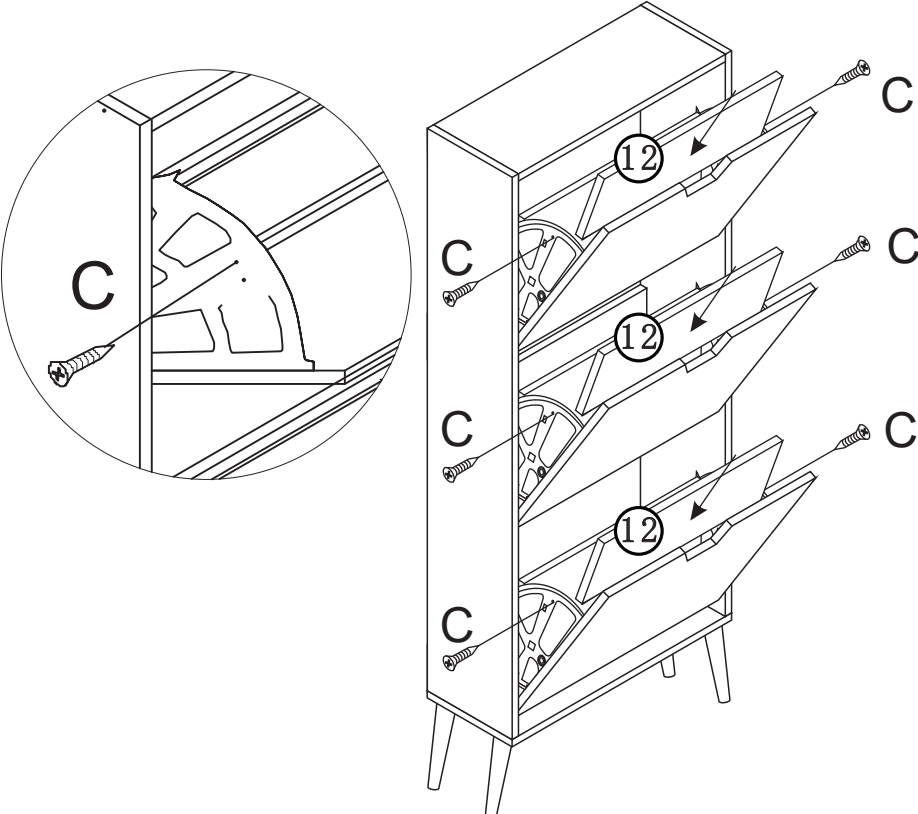
STOCKHOLM THREE TIER SHOE CABINET

ASSEMBLY INSTRUCTIONS

WALL STRAP	PARTS REQUIRED
<p data-bbox="150 367 181 434">i)</p> <p data-bbox="233 427 336 461">Remark</p>  <p data-bbox="715 887 762 954">ii)</p>  <p data-bbox="140 1379 204 1447">iii)</p> 	<p data-bbox="1185 322 1417 356">M:WALL FIXING X1</p>

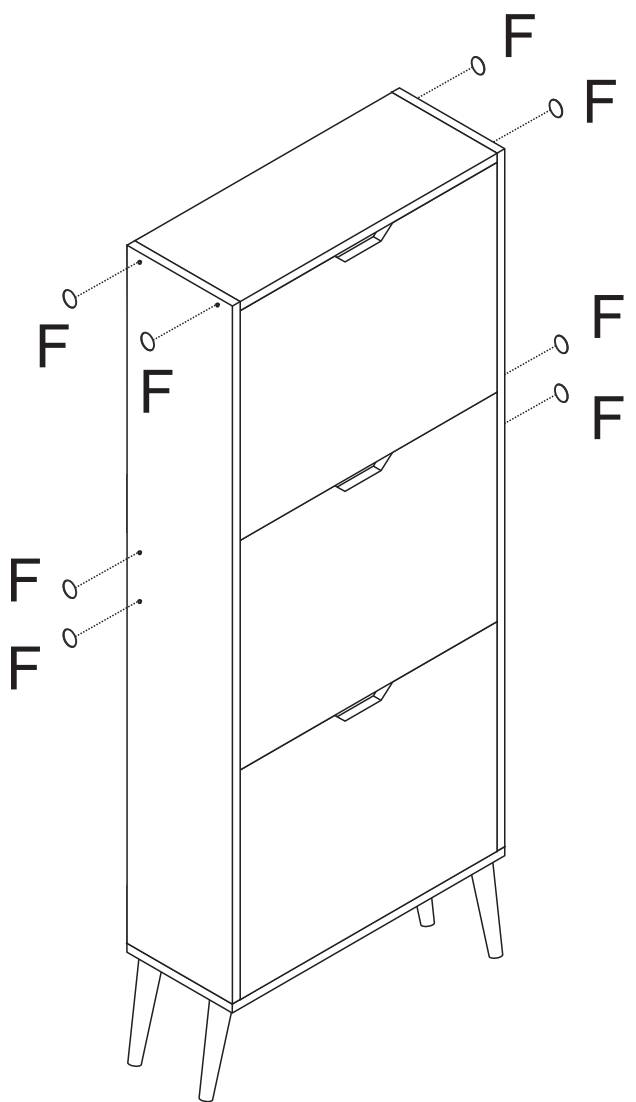
STOCKHOLM THREE TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

STEP 9	PARTS REQUIRED
	<p>C:SCREWS X6 J: INNER AXIS X 6</p>

STEP 10	PARTS REQUIRED
	<p>C:SCREWS X6</p>

STOCKHOLM THREE TIER SHOE CABINET

ASSEMBLY INSTRUCTIONS

STEP 11	PARTS REQUIRED
 <p>The diagram illustrates the application of 8 stickers (labeled 'F') to the cabinet. The stickers are placed on the top and side panels of the cabinet, which is shown in a three-quarter view. The top panel has 4 stickers, and the side panel has 4 stickers. The cabinet has three tiers and four legs.</p>	<p>F:STICKERS X8</p>

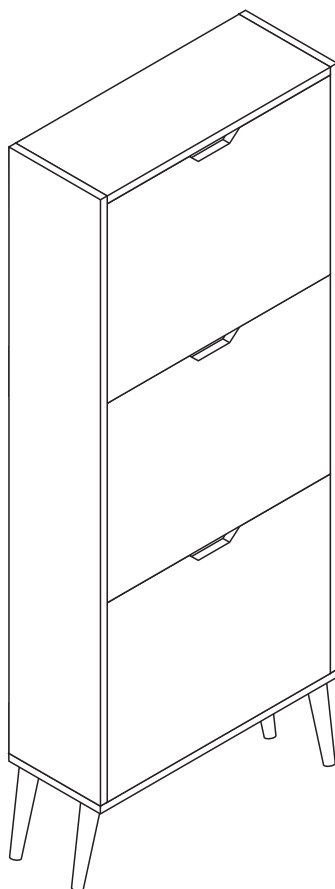
STOCKHOLM THREE TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

Complete Assembly

Your STOCKHOLM THREE TIER SHOE CABINET is now completely assembled.

Periodically check to ensure that the components are in their proper position, free from damage.

Also, make sure the connectors are tight and secure.



Retain these instructions for future reference.

