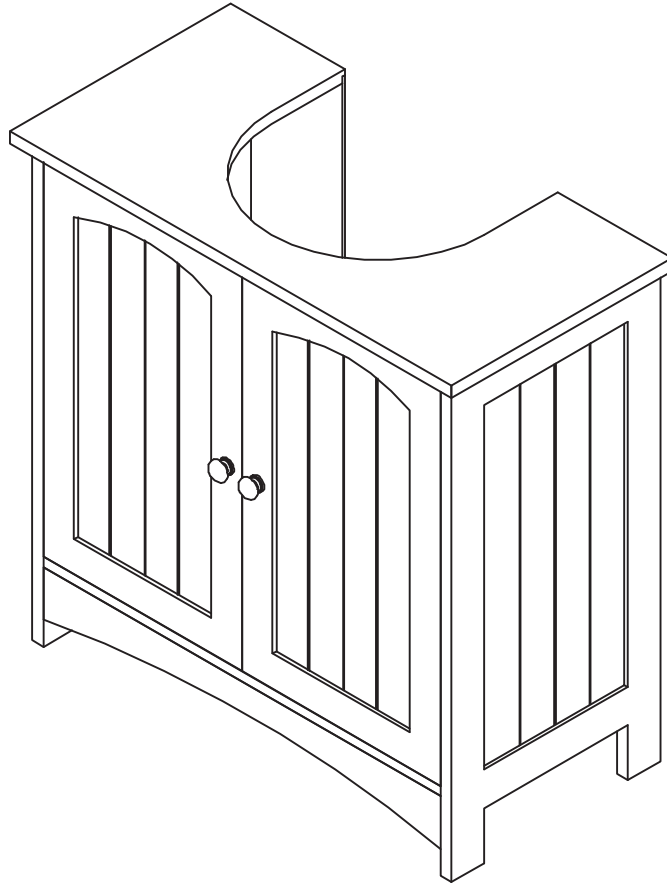


COLONIAL UNDERBASIN CUPBOARD WITHOUT SHELF

ASSEMBLY INSTRUCTIONS

Thank you for purchasing the COLONIAL UNDERBASIN CUPBOARD WITHOUT SHELF.
Please read the instructions carefully to ensure safe operation of the product.



W600 x D300 x H600mm

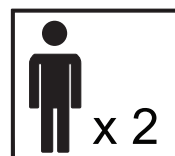

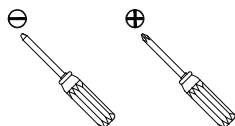
COLOUR:WHITE/GREY

PLEASE READ this sheet prior to assembly to familiarise yourself with the various stages of construction.

Carefully open the pack supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

CAUTION: There are small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit to avoid the danger of choking hazards.

Tools Required:



COLONIAL UNDERBASIN CUPBOARD WITHOUT SHELF ASSEMBLY INSTRUCTIONS

IMPORTANT - READ CAREFULLY - RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

INFORMATION

- Due to the size of this product we recommend that it is assembled in the room intended for use.
- When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled as illustrated before use.
- Check all screws or bolts are tightened and inspect regularly
- Tools are not included.
- This product should only be used on firm, level ground.
- Keep small parts out of reach of children.
- Make sure the legs remain in contact with the ground.

WARNINGS

- DO NOT use power tools to construct this product.
- DO NOT tighten screws until fully assembled.
- DO NOT over tighten screws or bolts.
- DO NOT use this product if parts are missing, damaged or worn.
- DO NOT sit or stand on the product.
- We recommend the use of the wall fixings provided for safety reasons.
N.B. If in doubt please consult a qualified tradesperson. **Warning:** Always ensure the area to be drilled is free from hidden electrical wires, water and gas pipes.
- It is essential that this unit is fixed to a wall with the fixings provided.

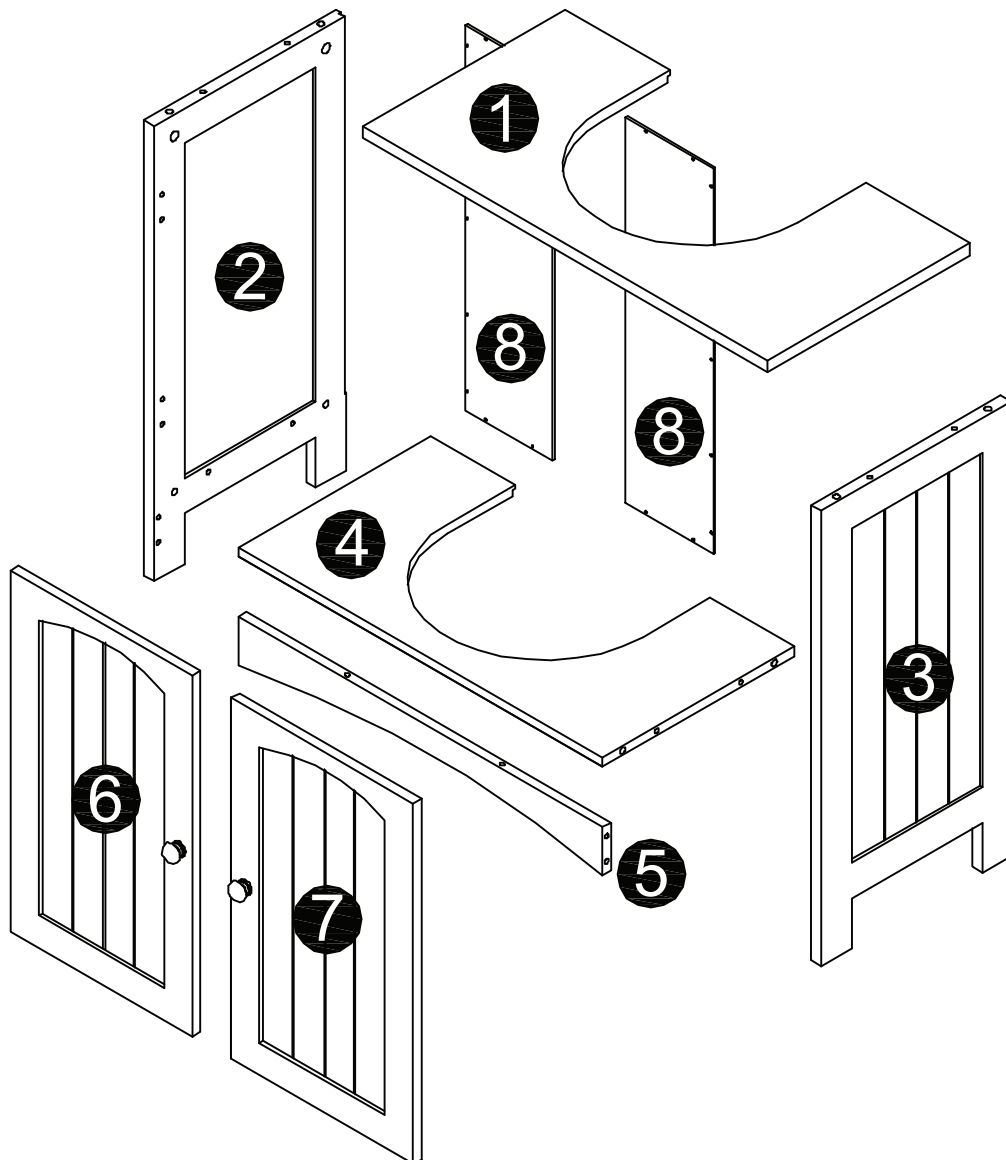
CARE INFORMATION

- Never use scourers, abrasives or chemical cleaners.
- To clean wipe with a sponge and warm soapy water. Do not use solvent based cleaners or detergents as they can bleach or damage the product.

COLONIAL UNDERBASIN CUPBOARD WITHOUT SHELF

ASSEMBLY INSTRUCTIONS

Please check the pack contents before assembling the product. If any components are missing, please contact your retailer. The fittings pack contains small items that should be kept away from small children.



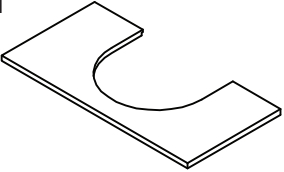
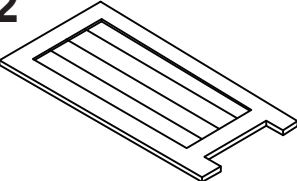
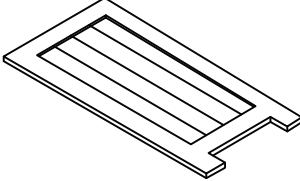
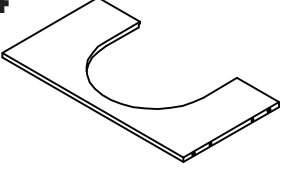
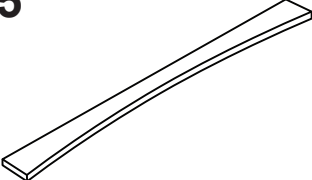
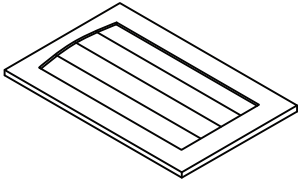
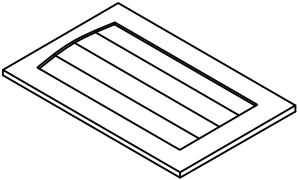
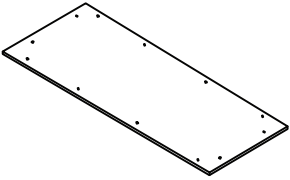
COLONIAL UNDERBASIN CUPBOARD WITHOUT SHELF ASSEMBLY INSTRUCTIONS

Parts and Fittings Checklist

Please check the pack contents before assembling this product. If any components are missing, please contact your retailer.

The fittings pack contains small items that should be kept away from small children.

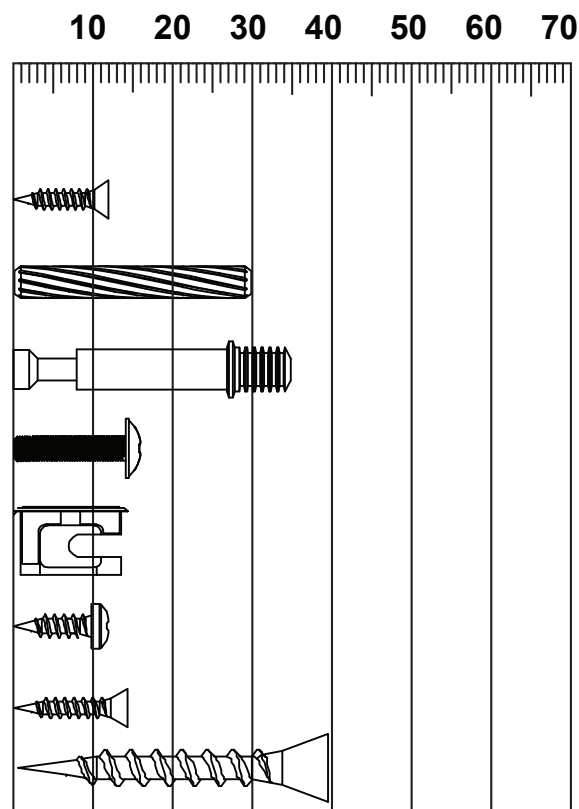
Parts

1 	2 	3 	4 
Description: TOP PANEL Qty: 1PC SIZE:600x300x15MM	Description: LEFT SIDE PANEL Qty: 1PC SIZE:585x285x15MM	Description: RIGHT SIDE PANEL Qty: 1PC SIZE:585x285x15MM	Description: BOTTOM PANEL Qty: 1PC SIZE:540x285x12MM
5 	6 	7 	8 
Description: LOWER SIDE PANEL Qty: 1PC SIZE:540x50x12MM	Description: LEFT DOOR Qty: 1PC SIZE:505x267x12MM	Description: RIGHT DOOR Qty: 1PC SIZE:505x267x12MM	Description: BACK PANEL Qty: 2PC SIZE:525x160x3MM

COLONIAL UNDERBASIN CUPBOARD WITHOUT SHELF ASSEMBLY INSTRUCTIONS

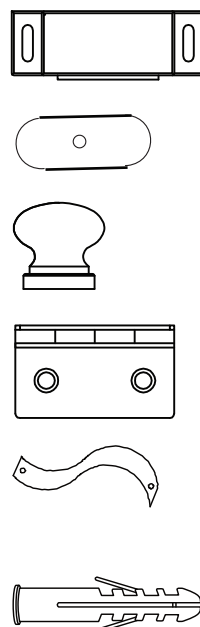
Fixings (to scale)

Ref	Dimensions	Qty
A	Screw- $\varnothing 3 \times 12$	20
B	Wood Dowel- $\varnothing 5.8 \times 30$	14
C	Cam Bolt- $\varnothing 6 \times 35$	8
D	Bolt- $\varnothing 4 \times 16$	2
E	Cam-15x10	8
F	Screw- $\varnothing 3 \times 12$	16
G	Screw- $\varnothing 3 \times 16$	2
H	Screw- $\varnothing 4 \times 40$	2



(Not to scale)

I	Magnetic Catch	1
J	Metal Plate	2
K	Handle	2
L	Hinge	4
M	Wall Fixing	2
N	Wall Anchor	2



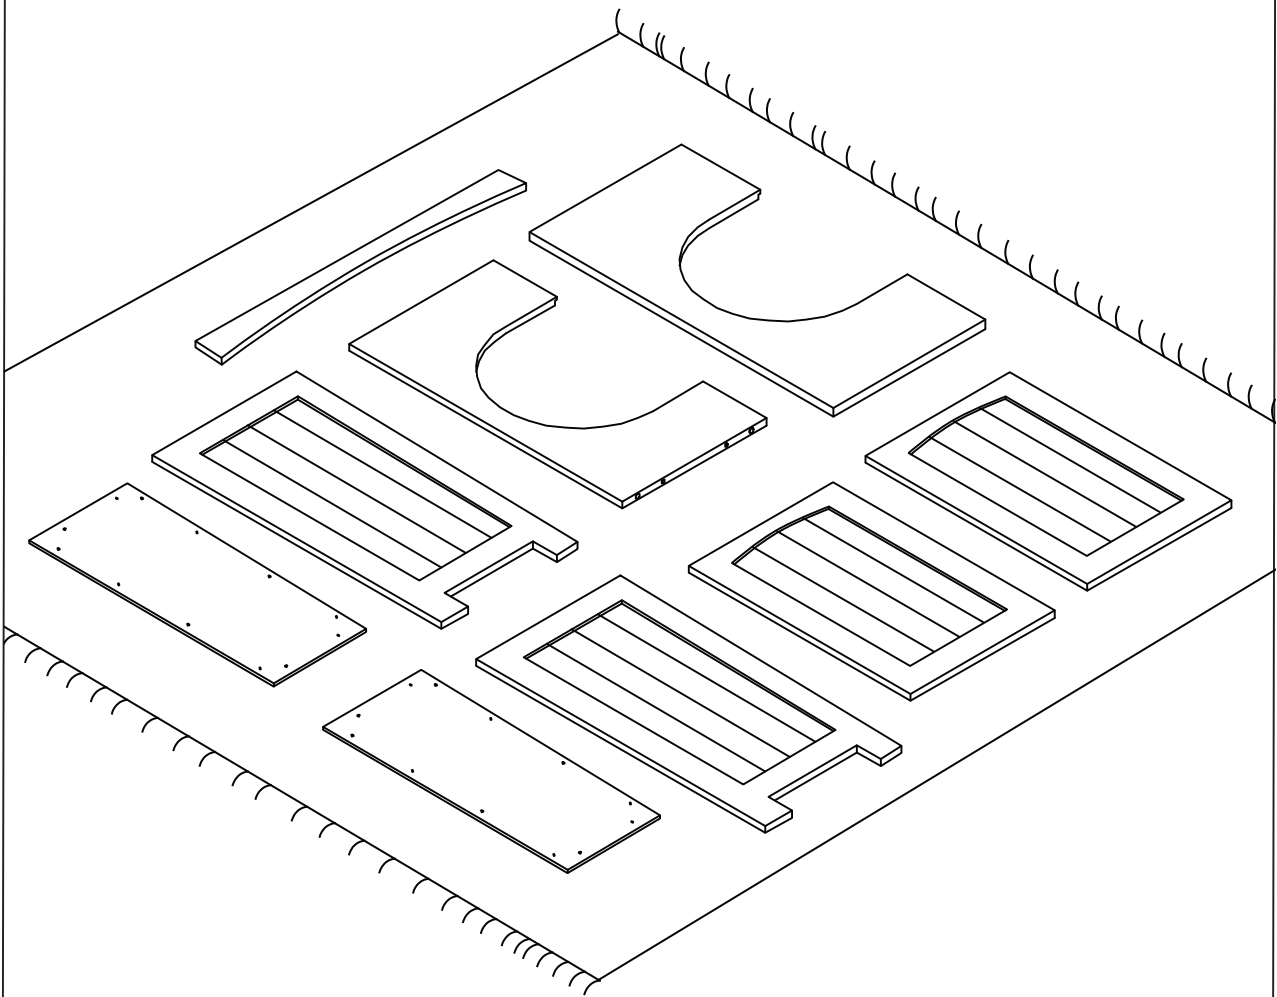
CAUTION: There are many small components used in the construction of this product. Please keep these components away from young children whilst assembling this product.

If you keep the fittings in a bowl during assembly you will be less likely to lose them!

COLONIAL UNDERBASIN CUPBOARD WITHOUT SHELF ASSEMBLY INSTRUCTIONS

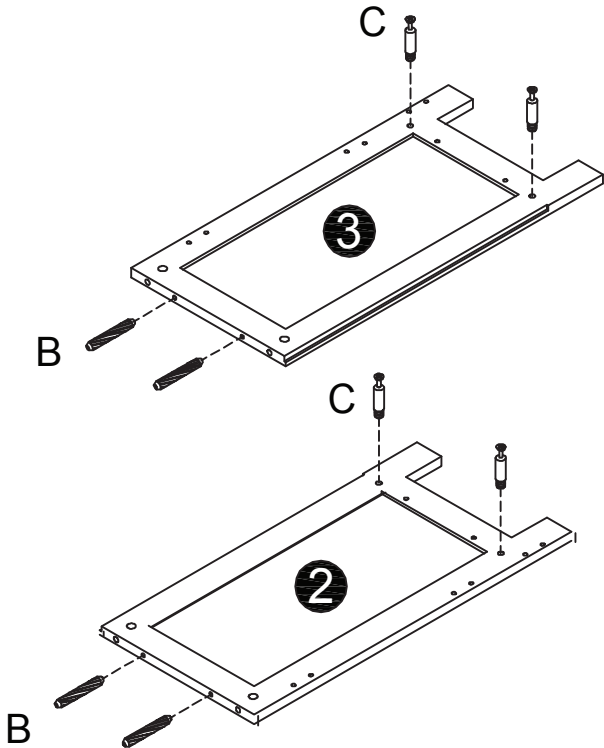
Layout Parts on Soft Surface

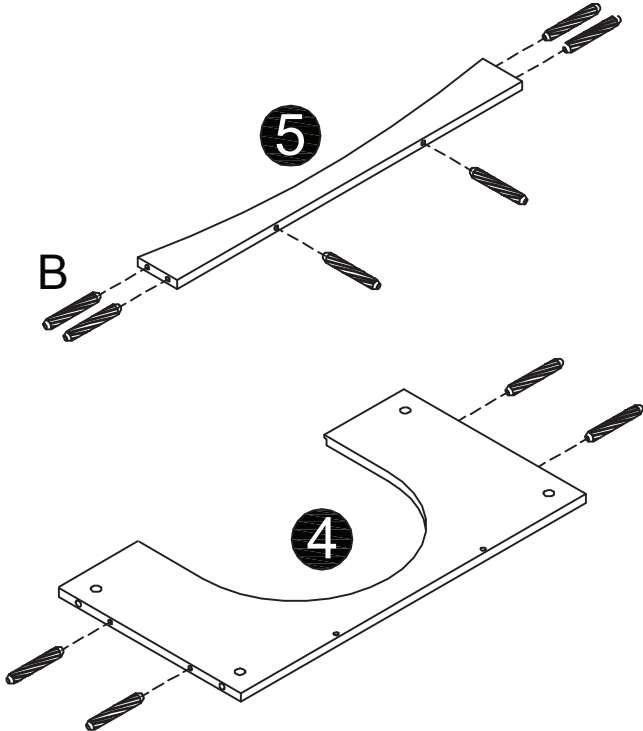
Lay out all part on a soft surface i.e. Rug, Carpet or Packaging Carton.



COLONIAL UNDERBASIN CUPBOARD WITHOUT SHELF

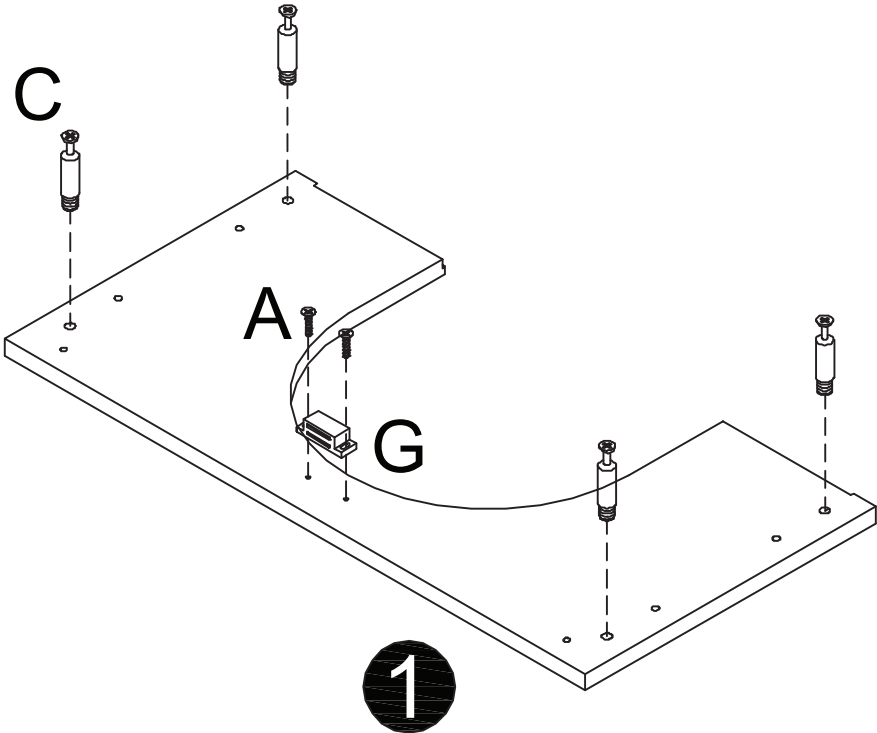
ASSEMBLY INSTRUCTIONS

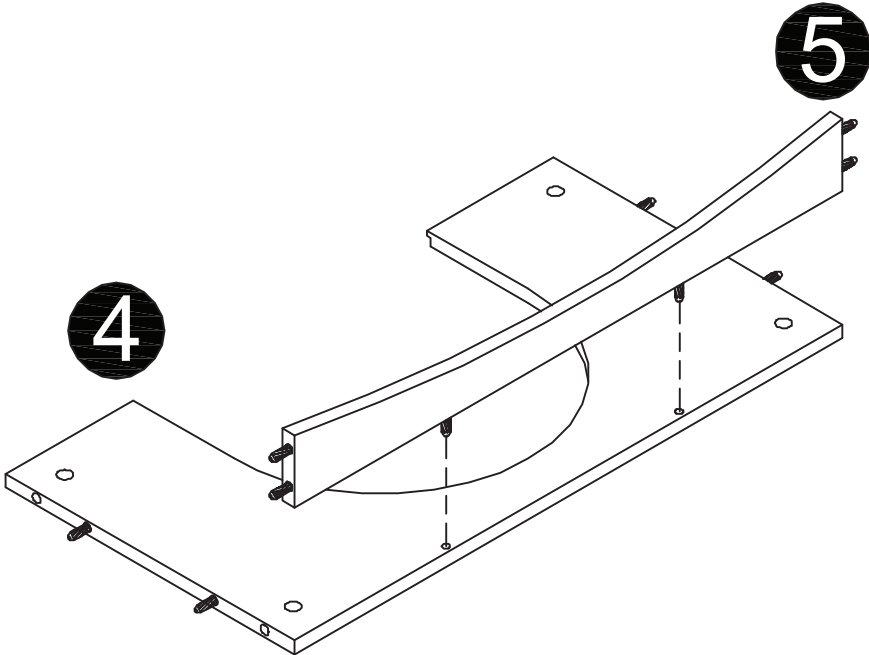
STEP 1	Parts Required
	<p>3. Right Side Panel x 1</p> <p>2. Left Side Panel x 1</p> <p>B. Wood Dowel x 4</p> <p>C. Cam Bolt x 4</p>

STEP 2	Parts Required
	<p>4. Bottom Panel x 1</p> <p>5. Lower Front Apron x 1</p> <p>B. Wood Dowel x 10</p>

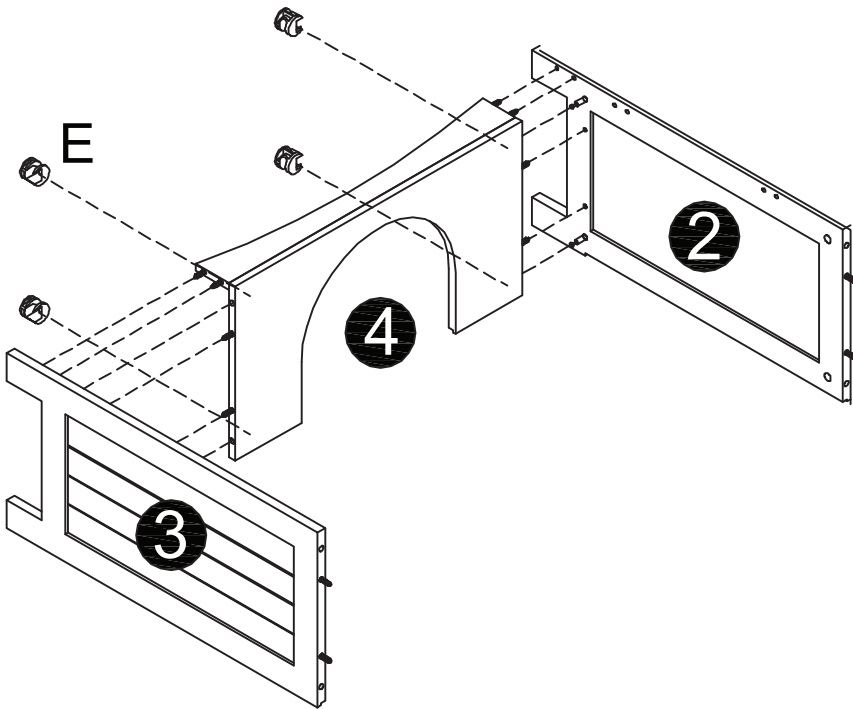
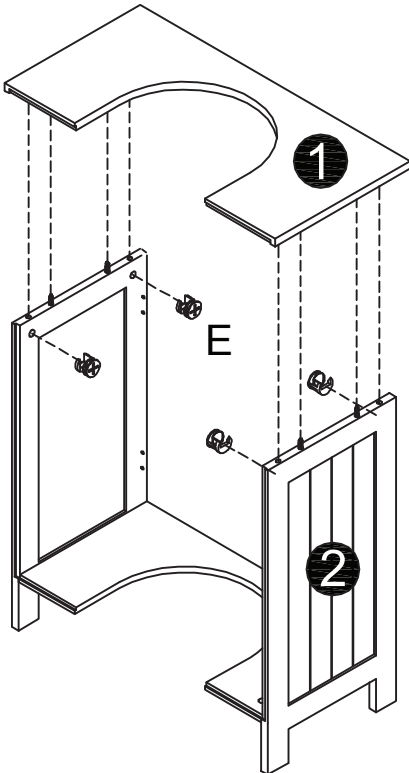
COLONIAL UNDERBASIN CUPBOARD WITHOUT SHELF

ASSEMBLY INSTRUCTIONS

STEP 3	Parts Required
	<p>1. Top Panel x 1</p> <p>A. 12mm Screw x 2</p> <p>C. Cam Bolt x 4</p> <p>G. Magnetic Catch x 1</p>

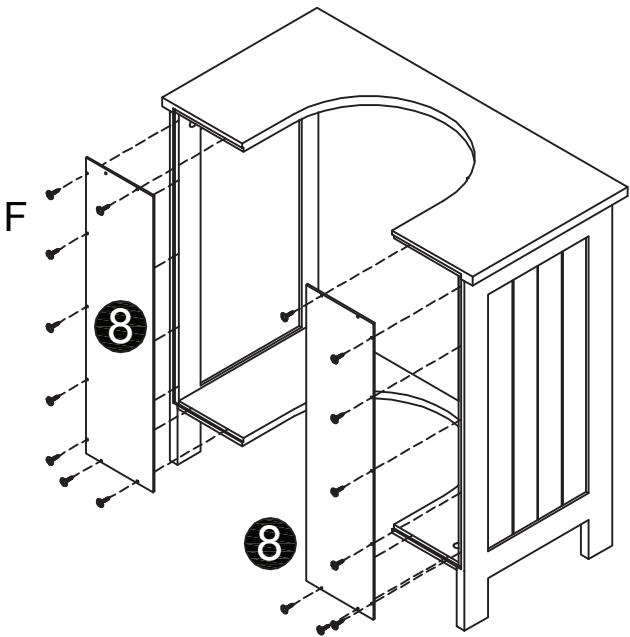
STEP 4	Parts Required
	<p>4. Bottom Panel x 1</p> <p>5. Lower Front Apron x 1</p>

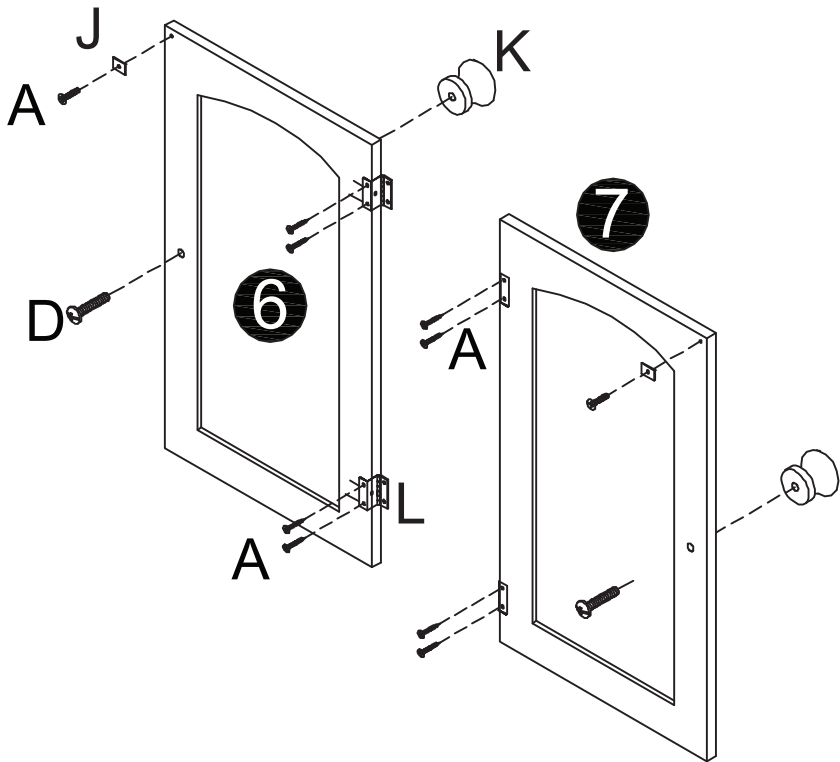
COLONIAL UNDERBASIN CUPBOARD WITHOUT SHELF ASSEMBLY INSTRUCTIONS

STEP 5	Parts Required
	<p>2. Left Side Panel x 1</p> <p>3. Right Side Panel x 1</p> <p>4. Bottom Panel x 1</p> <p>E. Cam x 4</p>
STEP 6	Parts Required
	<p>1. Top Panel x 1</p> <p>2. Left Side Panel x 1</p> <p>3. Right Side Panel x 1</p> <p>E. Cam x 4</p>

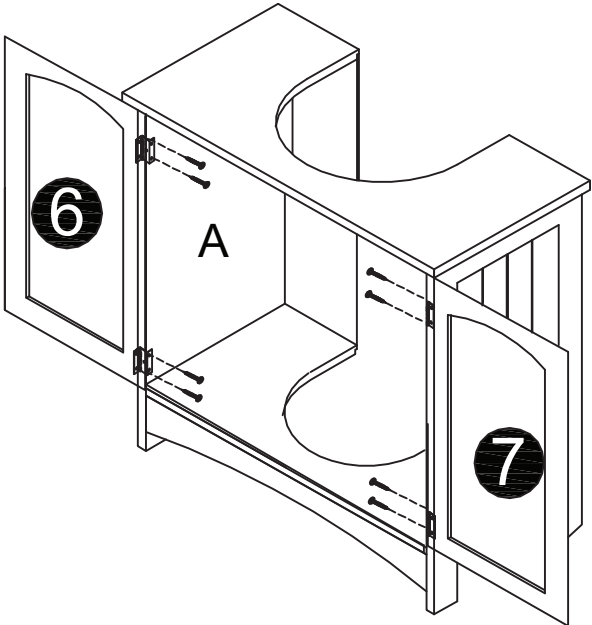
COLONIAL UNDERBASIN CUPBOARD WITHOUT SHELF

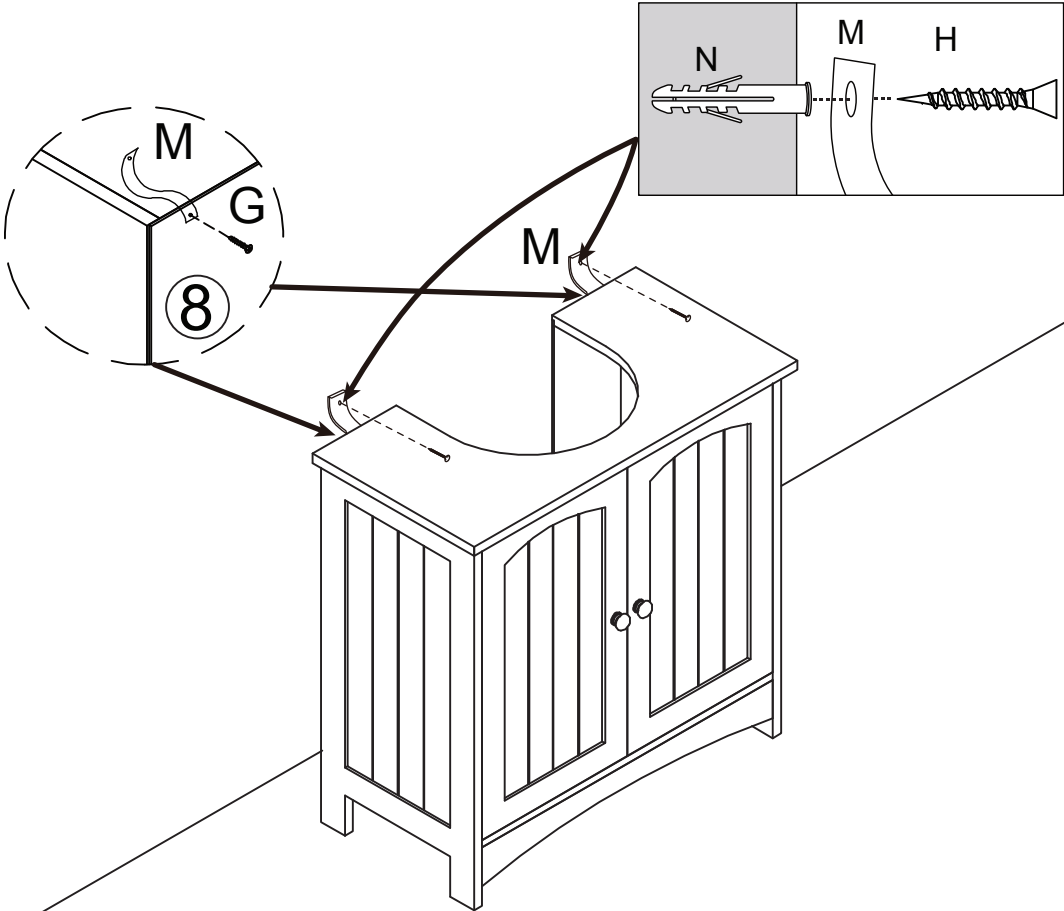
ASSEMBLY INSTRUCTIONS

STEP 7	Parts Required
	8. Back Panel x 2 F. 12mm Screw x 16

STEP 8	Parts Required
	6. Left Door x 1 7. Right Door x 1 A. 12mm Screw x 10 D. Bolt x 2 J. Metal Plate x 2 K. Handle x 2 L. Hinge x 4

COLONIAL UNDERBASIN CUPBOARD WITHOUT SHELF ASSEMBLY INSTRUCTIONS

STEP 9	Parts Required
	<p>6. Left Door x 1</p> <p>7. Right Door x 1</p> <p>A. 12mm Screw x 8</p>

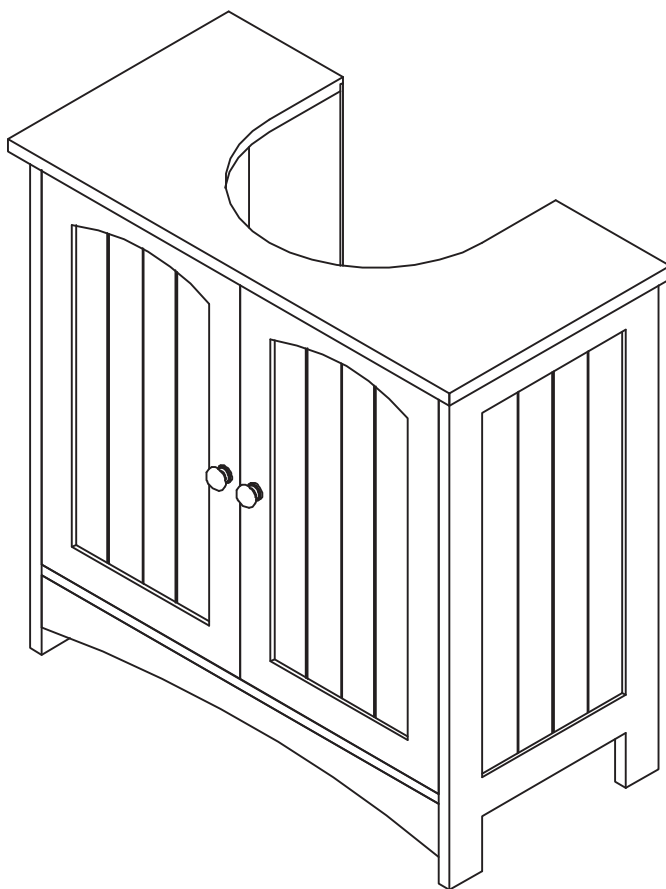
WALL FIXING	Parts Required
	<p>G. 16mmScrew x 2</p> <p>H. 40mmScrew x 2</p> <p>M. Wall Fixing x 2</p> <p>N. Wall Anchor x 2</p>

COLONIAL UNDERBASIN CUPBOARD WITHOUT SHELF ASSEMBLY INSTRUCTIONS

Complete Assembly

Your COLONIAL UNDERBASIN CUPBOARD WITHOUT SHELF is now completely assembled.

Periodically check to ensure that the components are in their proper position, free from damage. Also, make sure the connectors are tight and secure.



Keep instructions for future reference

